

# KINCROME C

PROFESSIONAL QUALITY TOOLS

## DEFLECTING BEAM TORQUE WRENCH

SLIDING  
SCALE

PROTECTIVE  
BLOW  
MOULD  
CASE

+/- 4%  
ACCURACY

DUAL  
INDICATION  
AUDIBLE CLICK  
& VISUAL



**K8030, K8031, K8032, K8034**

 
ED3 MARCH 2017

## Table Of Contents

Know Your Product .....	2
General Safety Instructions .....	3
Operation .....	3
Care & Maintenance .....	4
Spare Parts .....	4
Warranty.....	4

## Know Your Product

1. Thumb Screw
2. Torque Indicator Wedge
3. Torque Scale
4. A) Thumb Grip (K8032 Only)  
B) Handle Ball (K8032 Only)  
C) Finger Groove (Force Center)
5. Indicator Pin
6. Deflection Beam
7. Square Drive

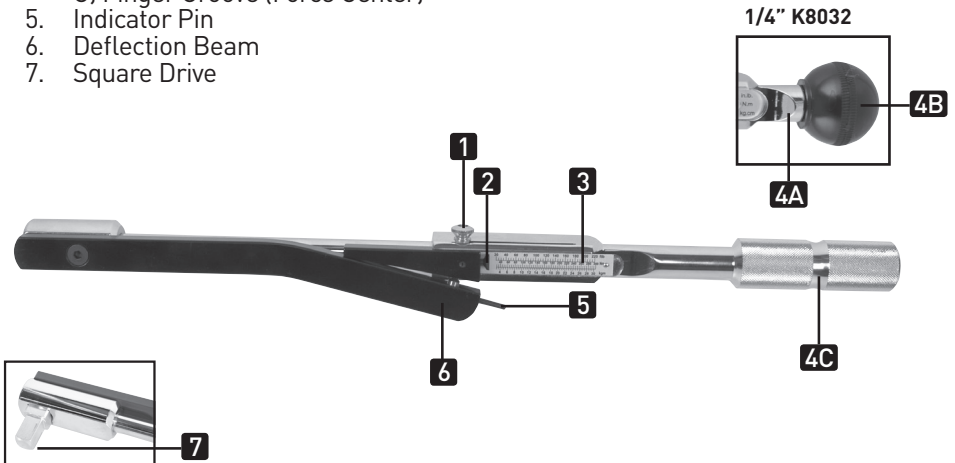

## SPECIFICATIONS

	<b>K8030</b>	<b>K8031</b>	<b>K8032</b>	<b>K8034</b>
<b>Drive Size:</b>	1/2" Square Drive	3/8" Square Drive	1/4" Square Drive	3/4" Square Drive
<b>Torque Range:</b>	20-200 Ft/Lb 40-300Nm	10-90 Ft/Lb 10-120Nm	50-200 Ft/Lb 5-25Nm	100-500 Ft/Lb 130-650Nm
<b>Accuracy:</b>	+/-4% of Setting	+/-4% of Setting	+/-4% of Setting	+/-4% of Setting
<b>Tool Length:</b>	490mm	371mm	210mm	895mm
<b>Tool Weight:</b>	1.8kg	0.97kg	0.26kg	6.3kg

## GENERAL SAFETY WARNINGS

1. Please study these instructions carefully before attempting to operate this wrench.
2. Never apply more torque than the maximum scale reading.
3. This torque wrench is designed for manual tightening of thread fasteners only.  
**DO NOT USE IT AS A NUT-BREAKER OR FOR ANY OTHER PURPOSE.**
4. Over torqued or defective fasteners and sockets may suddenly break. **TO PREVENT INJURY, KEEP PROPER FOOTING AND BALANCE AT ALL TIMES. DO NOT USE THE WRENCH IN PLACES FROM WHICH YOU MAY FALL OR SLIP, OR AROUND ROTATING MACHINERY.**
5. This torque wrench will not prevent you from applying more torque than set - this is not a torque limiting tool. Learn how different amounts of torque 'feel' so you will reduce the possibility of damage and/or injury due to accidental overtorquing.
6. **APPLY FORCE TO THE GRIP ONLY. DO NOT USE AS 'CHEATER BARS'.**  
(A piece of pipe placed over the hand grip/ball).
7. Spare Trip Kits are available and should be fitted by a qualified Service Agent and should be calibrated immediately to ensure accuracy.
8. All torque wrenches should be calibrated at least once a year or every 1,000 cycles, whichever comes first.
9. This torque wrench operates in a clockwise direction only, do not use to unfasten.
10. Lifetime Warranty does not cover calibration.

## ASSEMBLY OF YOUR TORQUE WRENCH

1. Your Torque Wrench is already supplied with a Removeable Square Drive (7).
2. Install the Square Drive (7), by inserting the drive into the Drive Receiver on the end of the Torque Wrench.
3. The Square Drive (7) should "click" in position once inserted in the correct way. NOTE: Some Square Drives may already be fitted into the Torque Wrench

## HOW TO USE YOUR TORQUE WRENCH



### WARNING!

1. **DO NOT** pull after the trip has clicked and the Indicator Pin (5) has been released. Use special care at low torque settings.
2. If using the torque wrench frequently, ensure the Indicator Pin (5) is pressed in after each use.
3. Your Torque Wrench is a precision instrument and should be treated as such.
4. Always store your Torque Wrench in the protective blow mould case.

1. Loosen the Thumb Screw (1) on the side of the Torque Wrench by rotating anti-clockwise.
2. Slide the Torque Indicator Wedge (2) to the desired torque setting, Torque Indicator Wedge (2) must be positioned onto the centre line of the desired torque number.
3. Tighten the Thumb Screw (1) by rotating clockwise.
4. Gently push in the Indicator Pin (5) back into the Deflection Beam (6) to reset the Torque Wrench. When the Torque Wrench is not in use, ensure the Indicator Pin (5) is pushed back into the Deflector Beam (6) to keep the pin from coming into contact with any obstructions, as this could cause damage to the Torque Wrench or effect the Wrench's calibration.
5. Install the appropriate socket to the torque wrench, then attach to the fastener to be torqued. Place your middle finger on the finger groove (4C) in the handle and grasp the handle. Slowly and evenly pull the handle until you hear the click or see the Indicator Pin (5) release. The set torque has been achieved.

- For the K8032 Torque Wrench, place your thumb on the Thumb Grip (4A) located on the outside edge of the Torque Scale (3) and gently grasp the handle ball (4B). Slowly and evenly pull the handle until you hear the click or see the Indicator Pin (5) release. The set torque has been achieved.

## SPARE PARTS

### K8030 Spare Parts

- K8030-1 Trip Kit
- K8030-2 Wedge Assembly Kit
- K8030-3 1/2" Square Drive

### K8032 Spare Parts

- K8032-1 Trip Kit
- K8032-2 Wedge Assembly Kit
- K8032-3 1/4" Square Drive

### K8031 Spare Parts

- K8031-1 Trip Kit
- K8031-2 Wedge Assembly Kit
- K8031-3 3/8" Square Drive

### K8034 Spare Parts

- K8034-1 Trip Kit
- K8034-2 Wedge Assembly Kit
- K8034-3 3/4" Square Drive

## CARE AND MAINTENANCE

It is normal for torque wrenches to go out of calibration with time and regular use. Whatever type of torque wrench you are using, regular calibration will ensure that your tools remain as accurate and effective as possible.

Putting in place a regular schedule for verifying and calibrating your torque wrench will mean less room for error. Kincrome Tools and Equipment recommend you have your torque wrench calibrated by a NATA™ approved calibration facility, every 12 months or 1,000 cycles. If your Kincrome Torque Wrench is dropped, knocked, even in the protective blow mould case, or any part replaced, the wrench must be immediately re-calibrated prior to next use. Your new Kincrome Torque Wrench is calibrated at the factory in Taiwan, prior to shipping and a certificate of that calibration is supplied for your individually serialised torque wrench. It is the sole responsibility of the owner/user of this tool to ensure the calibration is correct as the Torque Wrench may have gone out of calibration during transit to retailers. For peace of mind, you should get your torque wrench checked prior to first use. Please note, the Kincrome Limited lifetime warranty does not cover the cost of calibration, or the removable square drive of the wrench.

## WARRANTY

Warranty given by Kincrome Tools & Equipment Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria, Australia (Tel +61 3 9730 7100) If this product has materials or workmanship defects (other than defects caused by abnormal or non warranted use) you can, at your cost, send the product to place of purchase, an authorised Kincrome service agent or one of Kincromes addresses for repair or replacement. Your rights under this warranty are in addition to any other rights you have under the Australian, United Kingdom & Ireland Consumer Law or other applicable laws. Our goods come with guarantees that cannot be excluded under the Australian, United Kingdom & Ireland Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For further details please visit [www.kincrome.com.au](http://www.kincrome.com.au) or call us. Due to minor changes in design or manufacture, the product you purchase may sometimes differ from the one shown on the packaging.