

## Maintenance Kit Contents:

- |                             |                           |
|-----------------------------|---------------------------|
| <b>1</b> Quick Release Gear | <b>5</b> 2x Screws        |
| <b>2</b> Backing Plate      | <b>6</b> Ball Bearing     |
| <b>3</b> Pawl               | <b>7</b> Direction Switch |
| <b>4</b> Spring             |                           |



\*Maintenance Kit contains grease & TORX® Key

## Reversible Ratchet Maintenance Kit

### Instructions

- Use the TORX® key to remove the screws & disassemble the ratchet
- Clean the inside of the ratchet once removed

### To reassemble

1. Insert direction switch into Ratchet Body
2. Insert spring & ball into the ratchet body spring recess, Spring first
3. Use flat blade screwdriver to carefully apply pressure to the ball & spring until the ball is pressed into the spring recess
4. While holding the ball in position, install the pawl into the ratchet
5. Remove the screwdriver, releasing the spring tension so the ball makes contact with the pawl.
6. Ensure the direction switch is seated into the pawl correctly, The pawl should move as the selector is moved.
7. Lightly grease the ratchet gear assembly, Insert it into the ratchet body, ensuring the pawl stays in position & the quick release button is on the same side as the direction switch
9. Fit retaining plate into the ratchet
10. Fit the 2 TORX® screws & tighten



SCAN QR  
FOR VIDEO  
INSTRUCTIONS