

## Maintenance Kit Contents:

- |                             |                           |
|-----------------------------|---------------------------|
| <b>1</b> Quick Release Gear | <b>5</b> 2x Screws        |
| <b>2</b> Backing Plate      | <b>6</b> Ball Bearing     |
| <b>3</b> Pawl               | <b>7</b> Direction Switch |
| <b>4</b> Spring             |                           |



\*Maintenance Kit contains grease & hex key

# LOK ON Ratchet Maintenance Kit

**1/2****DRIVE**

## Instructions

- Use the hex key to remove the screws and disassemble the ratchet
- Clean the inside of the ratchet once removed

## To reassemble

1. Insert direction switch
2. Insert spring into slot at base of ratchet head
3. Rest ball bearing on top of the spring
4. Insert the pawl. Note: the ball bearing is pressed between the pawl and spring
5. Pawl and direction switch will connect together when inserted correctly.
6. Apply grease to quick release gear and place into the ratchet head.
7. Screw the backing plate back into place with the two provided screws.
8. Test the ratchet gear and switch both move freely each way.
9. Test the quick release button/function.



SCAN FOR  
**LOK•ON**  
FEATURES  
OR VISIT  
WEBSITE