



10 DRAWER COMBINATION SET CLASSIC

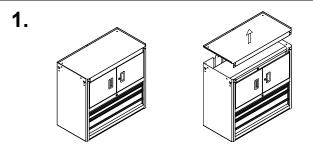

REMOVE UNIT FROM CARTON AND STAND UNIT UPRIGHT. REMOVE CABINET TOP BY LIFTING STRAIGHT UPWARD AND SET ASIDE.


Using a 10mm Spanner or Adjustable wrench, remove the 6pcs bolts/nuts from the cabinet top. Save the bolts/nuts to reinstall later. The Spanner and Adjustable wrench is not included.

2. REMOVE BOTH DRAWERS BELOW THE POWER TOOL STORAGE AREA

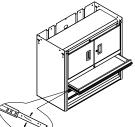

Open and fully extend the top drawer.And then pull the drawer completely out while holding the side release levers, as shown

To release ball bearing slides either push plastic release levers(left and right sides) down and up at the same time. Ensure each is in the opposite direction(up/down or down/up).

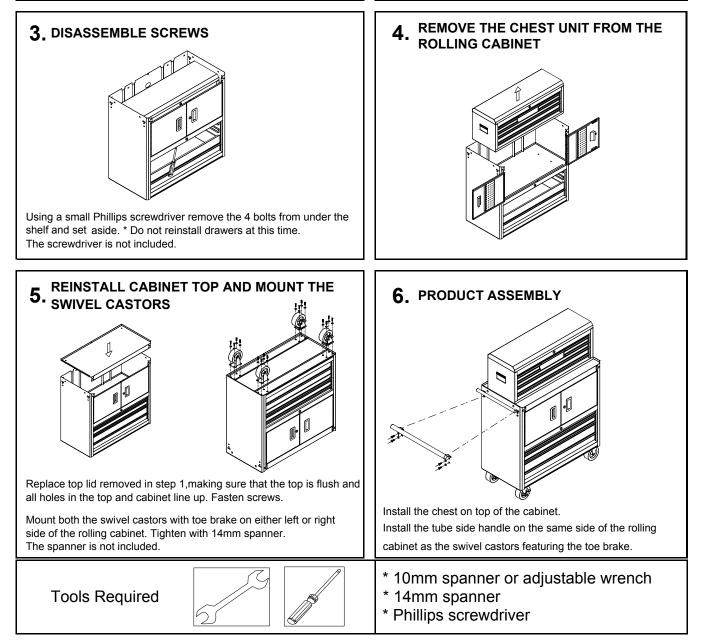

The Maximum loading capacity is 200 kg (440LB)