

TOOL TROLLEY

OPERATING TOOL TROLLEY.

THIS OPERATING MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. READ CAREFULLY AND

UNDERSTAND ALL INFORMATION BEFORE

SAVE THIS MANUAL FOR FUTURE USE

6 DRAWER

K7536

Operation Manual

Caution: Take Safety Precautions When Using Your Toolbox



















Parts List



TOOL TROLLEY SPECIFICATIONS

Overall V	Vidth	Depth	Height
(with castors) 7	45mm	475mm	950mm
(without castors) 7	45mm	475mm	825mm
Drawers (Shallow)	45mm	397mm	50mm
Drawers (Deep) 5	45mm	397mm	92mm
Side Tray 1	75mm	300mm	12mm
Castor Size: 1	125mm x 50mm (5" x 2") x 2 Locking		
Weight 6	0Kg		

Assembly Instructions





Non-Locking Swivel Castors (2)





Locking Swivel Castors (2)



 
8 x Hex Bolts for Push Handle



13mm x 16 Bolts (16) for Castors



Power Handle x 1



6 x EVA Liners



Washers x 16



Spring Washers x 16

 
TOOLS & ASSISTANCE NEEDED



2 People Lift



13mm Spanner



1



TOOL TROLLEY 6 DRAWER

K7536

Assembly Instructions

1 Handle Installing

- Position the trolley side handle behind the holes on the trolley.
- Attach with (4) bolts, and tighten with a 5mm Hex Key.

2 Castor Installing (If applicable)

- Be sure the drawers are locked and lay the trolley on its side.
- Secure castors to the unit using the 13mm bolts provided.
- Tighten with a 13mm Spanner.
- Repeat this process for the castors on the opposite of the trolley.
- Return the trolley to its upright position.

Caution: Do not over tighten the bolts. **Caution:** Both locking castors must be fitted to front of trolley.

3 Removing the Drawers


- Fully extend the empty drawer.
- Push up the right grey release lever while pushing down the left grey release lever.
- Pull the drawer outward until it is released from the drawer slide.


4 Re-Inserting The Drawers

- Extend the drawer slides.
- Insert the brackets on each side of the drawer into the slots on the slides, being careful that they are properly positioned.
- Once properly inserted, completely close the drawer to set the slides in their proper positions.

MAINTENANCE

- Periodically tighten all hardware
- Periodically lubricate castors
- Lubricate the slides twice a year
- Lubricate the lock with graphite annually
- Use a damp Microfibre cloth to clean all surfaces

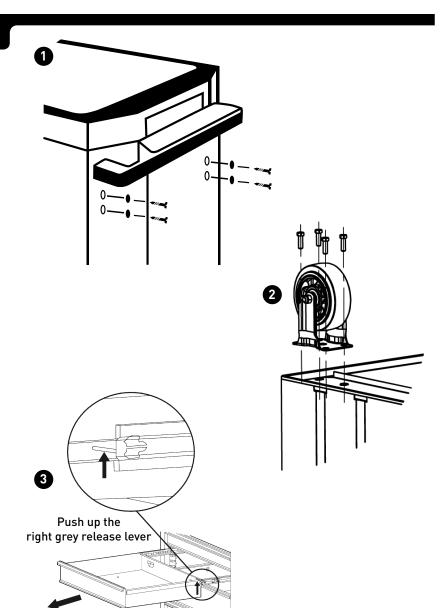

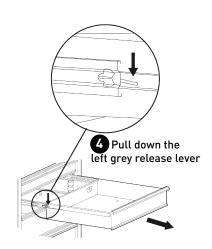

2



TOOL TROLLEY 6 DRAWER

K7536

Replacement Parts



REPLACEMENT PARTS

ITEM	PART NO.	DESCRIPTION	QUANTITY
1	K7778	Lock & Key	1
2	K7779	Key Only (Specify Number) X 1	1
3	K7759-5	Trolley Handle	1
4	K7741	Power Handle	1
5	K7747-16	Ball Bearing Slide (Pair)	6

ITEM	PART NO.	DESCRIPTION	QUANTITY
6	K7536-6	Eva Mat Pack Piece (6)	6
7	K7542-1	Castor Swivel X 1	2
8	K7542-2	Castor Swivel X 1 (Brake)	2
9	K7759-17	Castor Bolt Pack	1



National Head Office National Distribution and Showroom 3 Lakeview Dve, Caribbean Business Park Scoresby Victoria 3179 Australia ABN 41 007 185 006

Administration

T+61 3 9730 7100 F+61 3 9730 7199

E enquiries@kincrome.com.au W kincrome.com.au

Customer Service Centre T 1300 657 528 F 1300 556 005

Made to Kincrome Tools & Equipment Pty Ltd Global specifications and quality standards in Ch Kincrome UK Ltd PO Box 646 EASTLEIGH S050 0NA

Australia & Global	UK & EU
www.kincrome.com.au	www.kincrome.co.uk
enquiries@kincrome.com.au	enquiries@kincrome.co.uk

2

K7536 Manual.indd 3 9/05/2018 12:51 PM