


ABNORMAL CONDITION:

If an abnormal condition occurs, unplug and send this appliance to the Distributor (or any qualified electrician) for repair and/or electrical & mechanical adjustments.

SAVE THESE INSTRUCTIONS!



INSTRUCTION MANUAL

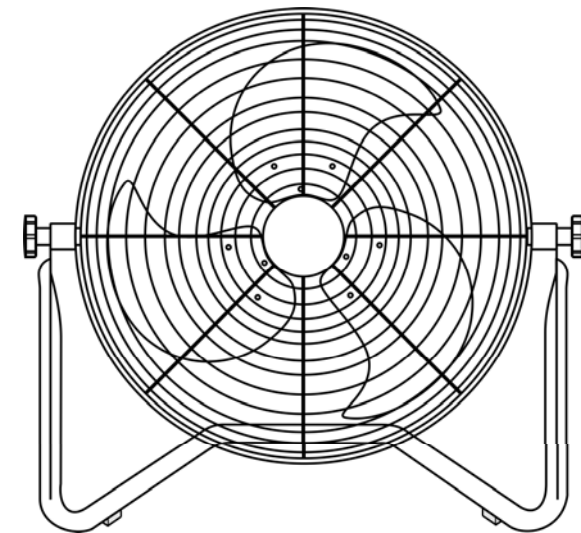

ELECTRICAL FLOOR FAN
Model K13005

**PLEASE READ THESE
INSTRUCTIONS BEFORE USE!**

INTENDED USE:

The KINCROME WORKSHOP Floor Fan is intended for industrial, commercial, indoor residential and office use.

IMPORTANT INSTRUCTIONS:

- 1 When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons.
- 2 Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 3 Do not place fan on an uneven or surface smaller than the fan which might allow fan to tip or fall causing damage to people or property.
- 4 Do not share same power outlet with other electrical appliances to avoid electricity overload.
- 5 Always unplug fan when not in use, when moving from place to place, and when cleaning.
- 6 Do not operate fan while unattended. Do not sit or stand on fan. Do not place objects on fan.
- 7 This fan is not intended for use by young children without supervision. Young children should be supervised to ensure that they do not play with the fan.
- 8 Do not insert or allow foreign objects into the fan or near the fan while fan is operating.

- 9 When adjusting the direction of fan, turn off fan before doing so.
- 10 Do not use fan in areas where gasoline, paint or flammable materials are used or stored.
- 11 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

CARE AND CLEANING:

- 1 This fan should be cleaned at least twice a year.
- 2 Disconnect the supply cord before cleaning the fan.
- 3 Use a piece of cloth &/or soft brush to clean away the dirt and dust that have accumulated. Thereafter, clean the guards & blades with lubricating oil with a piece of cloth &/or soft brush. Avoid harsh chemical cleaners.
- 4 Completely dry the fan and parts before use.

HOW TO USE:

- 1 Plug this appliance directly into AC 230V power outlet. Be sure plug fits tightly in outlet. A loose fit will cause overheating and damage to fan and plug.
- 2 Set speed selector switch to desired position.
- 3 To disconnect fan, turn switch off, then remove plug from power outlet.