



12 LITRE PARTS WASHER

K13087

Distributed by Kincrome Group www.kincrome.com.au

Owner's Assembly and Operating Manual

PUMP TECHNICAL SPECIFICATION	2
IMPORTANT SAFETY INFORMATION	3
General Safety Instructions	3
UNPACKING PARTS WASHER	4
Unpacking Carton	Error! Bookmark not defined.
Parts Washer	Error! Bookmark not defined.
OPERATING PARTS WASHER	4
Preparing Work Area.....	4
Using the Parts Washer	4
Cleaning.....	5
Storage.....	5
Repairing Parts Washer	5

PUMP TECHNICAL SPECIFICATION

Pump Model No.:	AP2000
Rated Voltage:	230V~
Rated Power:	26W
Ingress Protection Class:	IPX8
Max. Flow Rate:	1000l/h
Max. Water Temp.:	35°C
Insulation Type:	Earthed Appliance

IMPORTANT SAFETY INFORMATION

The use of a Parts Washer has inherent dangers; to avoid risk of personal injury or property damage make sure you are fully aware of the operating instructions for this product, the recommendations in this manual cannot cover all eventualities. This tool is designed and intended for use by properly trained and experienced personnel. If you are not familiar with the proper and safe operation of a Parts Washer, do not use until proper training and knowledge has been obtained.

This Parts Washer is intended for automotive and small engine use.

Do not use for any other purpose except those listed in this manual.

General Safety Instructions

To operate this appliance safely, the user must have read and understood these instructions before using this appliance.

This appliance is not intended for the use by persons (including children with a reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

The pump must be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30mA.

WARNING: This pump is not designed to be used out of water. It must only be operated whilst submerged in the recommended fluid.

If the appliance shows any sign of abnormal water leakage or malfunction, immediately disconnect it from the power source. Do not attempt repairs yourself

Do not operate the appliance if it has a damaged power supply cord or plug, or it is malfunctioning, or has been dropped or damaged in any manner. If the plug or socket does get wet, do not unplug or disconnect the appliance from the socket.

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacture or its service agent.

UNPACKING PARTS WASHER

Parts Washer

The Parts Washer is supplied with a 240V fluid pump; the pump is designed to operate with non-flammable liquid cleaners or water. DO NOT use solvent based degreasing agents, chemicals, or fluids as they pose a serious fire risk. For best operation ensure Parts Washer is operated on firm flat surface, Before plugging in the device check the pump switch is in the off position and the directional fluid nozzle is pointing down into the Parts Washer , never point the fluid nozzle at any operator or by standard, keep the fluid nozzles directed down and toward the job.

When storing device always turn the power switch to the off position and disconnect the power lead. If the Parts Washer is not to be used for an extended period ensures no cleaning fluid is left in the sump.

OPERATING PARTS WASHER

Preparing Work Area

Before using the Parts Washer, it is important to prepare work area properly. Follow this procedure each time the Parts Washer is used to help prevent property damage and/or serious injury.

- 1.) Thoroughly inspect Parts Washer for damage or wear before each use. Briefly test operation before using to work on any job. If supply cord is damaged or machine is malfunctioning DO NOT USE until the problem is corrected. Always have electrical items serviced or repaired by a licensed electrical contractor.
- 2.) Consult owner's manual for safety precautions correct use and recommended procedures before using the Parts Washer and Parts Washer. NEVER USE FLAMMABLE LIQUIDS or SOLVENTS IN THE PARTS WASHER, use of abrasive, acidic or strongly alkaline cleaners will greatly reduce the seal life of the pump.
- 3.) Never use to clean or work on jobs which overhang the table or Parts Washer, Large or heavy objects may cause the table to become unstable and may topple over leading to personal injury and or property damage.
- 4.) Clear obstructions from work area. Working in tight or cluttered work areas is dangerous.
- 5.) Ensure Parts Washer is on a solid level surface. Uneven or sloped surfaces create hazardous working conditions and may dangerously impede the function of the Parts Washer.

Using the Parts Washer

- 1.) Place the Parts Washer on a smooth level surface.
- 2.) Select the cleaning fluid for the job to be done. The use of solvents or chemicals will create a potentially dangerous situation.
- 3.) Ensure the fluid nozzle is pointing into the Parts Washer ,
- 4.) Ensure the part washer is disconnected from the power supply and switched off before adding the fluid to the Parts Washer.
- 5.) Do not move the Parts Washer when filled with cleaning fluid or if the drain reservoir is full.
- 6.) Always disconnect power lead before storing the Parts Washer.

Cleaning

Unit should be stored clean and dry, and recovered liquids or cleaning fluids should be responsibly disposed of and the machine wiped over with a clean cloth.

Do not use gasoline, kerosene, or other such solvents or any abrasive cleanser as cleaning agents and solvents may lead to a fire risk.

Storage

Before storage, disconnect plug from the power source and remove all fluids and cleaning liquids.

Repairing Parts Washer

There are no user serviceable parts except as outlined above. Only the manufacturer, its service agent or similarly qualified person should attempt to repair or replace parts in order to avoid a hazard.

Any modifications to K13087 Parts Washer, except those performed by the manufacturer, or their designee, will void all warranties both written and implied.

Warranty given by Kincrome Australia Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria (Tel 1300 657 528). If this product has materials or workmanship defects (other than defects caused by abnormal or non warranted use) you can , at your cost, send the product to place of purchase, an authorized Kincrome service agent or one of Kincrome's addresses for repair or replacement. Your rights under this warranty are in addition to any other rights you have under the Australian Consumer Law or other applicable laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For further details please visit www.kincrome.com.au or call us

Distributed by Kincrome Tools and Equipment

www.kincrome.com.au

3 Lakeview Drive Scoresby Victoria

Phone: 1300 657 528

