

# K10200

## **Safety information and operating instructions for table lamp K10200**

With the use of electrical devices general safety precautions must be taken to reduce the risk of an electrical shock, ignition of fire or other endangerments. Read therefore the following safety and operating instructions carefully and attentively. Keep this document for later rereading carefully. If you pass the equipment on to other persons, you must pass on also this document to ensure a safe use of the equipment.

### **1. Technical Specification:**

#### **Lamp**

Model-No.:	K10200
Power/Frequency:	3.7V DC (rechargeable battery, Li-ion) 2200 mAh
Bulb:	High super bright 1*4W COB LED
Max. output (control gear):	4W
Electric Class:	Class III
Usage period:	Approx 2hours
Charging period:	Approx 4hours
Ambient temperature	-5° - +40°C
IP: 68	

#### **Recharging**

Completely charge the batteries before you first use the lamp.

Switch off the workshop lamp during the charging process.

#### **Charging using the 230V mains unit**

- Plug the power supply into an ordinary 230V AC mains power socket.
- Plug the charger cable into the corresponding socket on the handgrip or charge base
- The LED indicator light will light up during the charge
- Once the batteries are completely charge, the LED indicator light turns green.

### **2. Important safety information**

- For indoor use only. The luminaire must not be used in damp locations, green houses or similar locations.
- Before any action for lamp cleaning, disconnect the charge base from the mains and let it cool down completely.
- Ensure the voltage of your household installation is matching with the voltage shown on the rating label of the luminaire.
- Never use the luminaire in areas with flammable atmosphere. Risk of explosion or fire hazard.
- Never store easy flammable liquids, colours, gas containers or similar goods directly to the appliance.
- Attention! Never insert any object into the appliance openings. Risk of injury due to electric shock and/or risk of damage to the luminaire.
- Never attempt any repair to the luminaire, there are no serviceable parts inside. In case a repair is required, send the appliance to the manufacturer, his service agency or an authorized and qualified service centre.
- Always switch off and disconnect from the mains before cleaning, relocating, storing or when the appliance will not be used for a longer period of time.  
In case of malfunction, emission of smoke or strange sounds, disconnect from the mains immediately and send it back to your local dealer.
- Do not over bend the moveable parts of the luminaire.
- Do not cover with paper, textile, cloth or similar materials or closed like a bucket for instance.
- Never immerse the appliance, the supply cord or the mains plug into water or other liquids. Mortal danger!
- Never clean the appliance with splash water, steam cleaner, pressure cleaner or similar devices.
- This luminaire is not a toy. Don't allow children to use this luminaire without close supervision by an adult. Do not allow children to play with the luminaire and never leave the luminaire unattended when children are around.
- The fixed flexible supply cord of this product cannot be replaced. When the cord or the mains plug is damaged the product must not be used any longer and must be discarded.

### **3. Before the first use**

- Remove all packing materials and make sure they are stored or disposed outside the reach of children. Packing materials like plastic foil or bag can be live threatening for children.
- Check the appliance for any damage.
- Connect the mains plug to a suitable socket outlet for recharge.
- Open the cover and the luminaire will begin to light.
- In case of malfunction, disconnect the luminaire from the mains and contact your local dealer.

### **4. Maintenance and cleaning and lamp replacement**

- Check the luminaire frequently for any damage which could impair the safety of the appliance. If the appliance has been subject to an excessive strain (e.g. it was falling on the floor) damages might not be visible from the outside. In this case don't use the appliance and send it for a safety check to the repair centre.
- Store the luminaire in a dry and cool place. It is strongly recommend to close the cover to avoid dust and dirt depositing at the lamp. When the appliance is not in use for a longer period of time it shall be protected against dirt and dust. It is recommended to store the appliance in the original packing.
- Before carrying out the cleaning process, disconnect the luminaire charge base from the mains and let it cool down completely.
- Clean the appliance with a soft and clean slightly dampened cloth, a vacuum cleaner equipped with a soft brush or a soft brush.
- Attention! Never use sharp, abrasive or flammable materials (like alcohol or cleaning solvent) for cleaning. These materials will damage the electrical insulation of the appliance.

Warranty given by Kincrome Australia Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria (Tel 1300 657 528). If this product has materials or workmanship defects (other than defects caused by abnormal or non-warranted use) you can, at your cost, send the product to place of purchase, an authorised Kincrome service agent or one of Kincrome's addresses for repair or replacement. Your rights under this warranty are in addition to any other rights you have under the Australian Consumer Law or other applicable laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For further details please visit [www.kincrome.com.au](http://www.kincrome.com.au) or call us.