

KINCROME

Tripod Area Light 6000 lumens

K10339


Specifications



WARNING:

This operating manual contains important safety information, read carefully & understand all information before operating the Tripod Area Light. Save this manual for future use.

LED type	SMD LED
Colour temperature	2700K, 3500K, 4500K, 5500K, 6500K
Light output	Eco - 600lm, Low - 1200lm Med - 2400lm, High - 6000lm
Runtime	Eco - 16hrs, Low - 8hrs Med - 4hrs, High - 2hrs
Battery	Rechargeable 14.8Vdc 5200mAh Li-Ion 16.96Wh
Charge time	4,5 Hours
Charger input	20.0Vdc 1.2A
Charging temp range	0°C to 30°C
Operating temp range	-10°C to 40°C
IP rating	IP65 - Dustproof & water resistant
IK Rating	IK07 - Impact resistant
Weight	4.4 kg
Measurements	Extended - L142 x W142 x H2240mm Folded - L142 x W142 x H1200mm

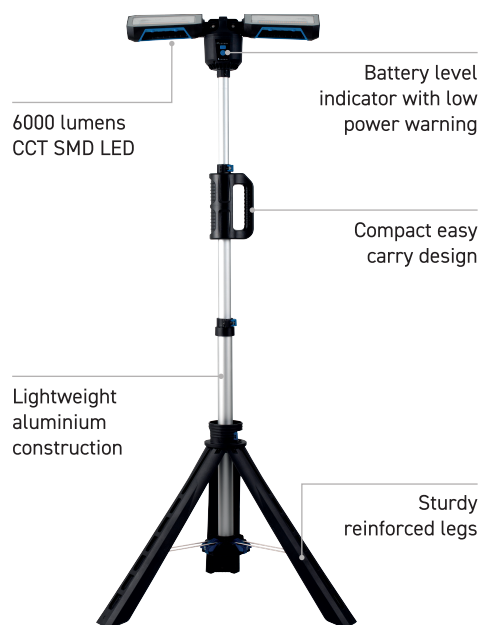

Safety Warnings

GENERAL SMD LED WORKLIGHT SAFETY WARNINGS



Save all warnings and instructions for future reference.
WARNING! Read all safety warnings and all instructions.
Failure to follow the warnings and instructions may result in serious injury.
DO NOT look into the lamp when it is switched on. Eye damage can occur.

1) Work Area Safety

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

2) Electrical Safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

KINCROME

Tripod Area Light 6000 lumens

K10339

- d. **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f. **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.**

3) Personal Safety

- a. **Stay alert, watch what you are doing and use common sense when operating a power tool.** Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b. **Use personal protective equipment.** Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c. **Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and/or battery pack, picking up or carrying the tool.** Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d. **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e. **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.
- f. **Dress properly. Do not wear loose clothing or jewellery.** Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

4) Battery Tool Use and Care

- a. **Luminaire can under no circumstances be mounted on normally flammable surfaces.**
- b. **Ensure the floodlight is correctly charged before initial use.**
- c. **DO NOT leave the unit in a totally discharged state for an extended period of time as this may result in permanent damage.**
- d. **DO NOT cover or block the lens during use.**
- e. **DO NOT turn the floodlight on when it is being re-charged.**
- f. **DO NOT shine directly into your, other person's or animal's eyes.**
- g. **DO NOT allow children to use the floodlight.**
- h. **DO NOT handle or move the floodlight whilst it is being charged.**
- i. **DO NOT use the floodlight if you suspect that the battery or the spotlight casing is damaged.**
- j. **DO NOT immerse the floodlight in water.**
- k. **Ensure the floodlight is unplugged and allowed to cool before attempting any cleaning or replacement.**
- l. **When not in use store the floodlight in a safe, dry, childproof location.**
- m. **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- n. **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.**
- o. **Under abusive conditions, liquid may be ejected from the battery; avoid contact.** If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

5) Service

- a. Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

6) Additional Safety Instructions for Chargers and Batteries

- a. **Before using the charger, read all instructions and cautionary markings on charger, battery pack and product using the battery pack.**
- b. **Do not place any object on top of the charger or place the charger on a soft surface that may result in excessive internal heat.** Place the charger in a position away from any heat source.
- c. **To reduce risk of damage to the electric plug and cord,** pull by the plug rather than the cord when disconnecting the charger.
- d. **Make sure cord is located so that it will not be stepped on,** tripped over, or otherwise subjected to damage or stress.
- e. **An extension cord should not be used unless absolutely necessary.** Use of an improper extension cord could result in the risk of fire, electric shock or electrocution.
- f. **Do not operate charger if it has received a sharp blow,** been dropped or otherwise damaged in any way. Have it checked by an electrician or power tool repairer.
- g. **Do not disassemble charger.** Take it to an electrician or power tool repairer when service or repair is required. Incorrect reassembling may result in a risk of electric shock, electrocution or fire.
- h. **To reduce risk of electric shock, unplug charger from the outlet before attempting any cleaning.** Removing the battery pack will not reduce this risk.
- i. **Never attempt to connect 2 chargers together.**

KINCROME

Tripod Area Light 6000 lumens

K10339

- j. **DO NOT store or use the tool and battery pack in locations where the temperature may reach or exceed 40°C** (such as outside sheds or metal buildings in summer).
- k. **The charger is designed to operate on standard household electrical power (240 Volts).** Do not attempt to use it on any other voltage!
- l. **The battery pack is not fully charged out of the carton.** First read the safety instructions and then follow the charging notes and procedures.
- m. **The longest life and best performance can be obtained if the battery pack is charged when the air temperature is between 18 - 24°C.** Do not charge the battery pack in an air temperature below 10°C or above 40°C. This is important and will prevent damage to the battery pack.
- n. **Do not incinerate the battery pack even if it is seriously damaged or is completely worn out.** The battery can explode in a fire.
- o. **Never attempt to open the battery pack for any reason.** If the plastic housing of the battery pack breaks or cracks, immediately discontinue use and do not recharge.

7) Electrical Safety

- a. **Inadequate extension cords can be dangerous.** If an extension cord is used, it shall be suitable for outdoor use, and the connection has to be kept dry and off the ground. It is recommended that this is accomplished by means of a cord reel which keeps the socket at least 60 mm above the ground. Always use an approved extension lead suitable for the power input of this tool. Before use, inspect the extension lead for signs of damage, wear and ageing. Replace the extension lead if damaged or defective. When using an extension lead on a reel, always unwind the lead completely. Use of an extension lead not suitable for the power input of the tool or which is damaged or defective may result in a risk of fire and electric shock.
- b. **Always switch off the mains disconnecting switch when leaving the machine unattended.**
- c. **Never touch the mains plug and the socket with wet hands or use the appliance in the rain.**

8) Fire Hazard! Risk of Explosion

- a. Never use appliance if the integrated battery pack or batteries are damaged, defective or deformed.
- b. Never open damage or drop the appliance.
- c. Never Charge the appliance in the vicinity of acids and other flammable materials.
- d. Incorrect charging or charging outside the permissible range can destroy the integrated battery pack or battery and increase the risk of fire.
- e. Protect appliance against heat. Never place them on radiators or expose them to strong sunlight for extended periods.
- f. Allow the product to cool down after prolonged use.

Advice & Important Information!

- Ensure the Tripod Area Light is fully charged before initial use.
- DO NOT turn the Tripod Area Light on when its being charged.
- DO NOT leave battery in a discharged state, recharge battery immediately. Before storage, fully recharge the battery, subsequently recharge the battery at least once every six months of non-use.
- DO NOT dispose of this Tripod Area Light in normal household waste, the battery must be recycled or disposed of properly in accordance to local laws and regulations.
- DO NOT open, crush, heat above 60°C (140°F) (for Li-Ion) or incinerate.
- Battery life is affected by different lighting modes.
- DO NOT look directly at the LED. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT shine the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT operate in direct sunlight or extreme temperature conditions (below -10°C or above 40°C).
- The LED will become hot when switched on; DO NOT touch and DO NOT place face down on any surface – risk of fire!
- DO NOT use the device if there is any visible damage to the housing, switch or lens.
- Keep away from children! Children should be supervised in order to ensure that they DO NOT play with the device!
- To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
- Store idle light out of reach of children. Warm lights can become hazardous in the hands of children.
- DO NOT open, disassemble or attempt to modify the product; this will void the warranty and can be dangerous.
- Improper use or modification is not covered under the warranty.
- Take care not to let the lenses come into contact with hard/sharp objects, damage/scratches to the lenses will affect light output.
- Protect batteries from heat, intense sunlight, fire, water and moisture – danger of explosion!
- If batteries are damaged, fluids can leak out. AVOID contact as this can lead to skin irritation and/or burns. If skin contact happens, rinse thoroughly with water. If irritation persists, seek medical advice.
- Seek immediate medical assistance if battery acid comes into contact with the eyes.

KINCROME

Tripod Area Light 6000 lumens

K10339

Operation

CAUTION: The charger for this product should be protected by residual current device (rated at 30mA or less).

CAUTION: Keep the charging port clean of dirt and debris.

Charging the Battery

The battery fitted to this cordless tool is considered to be a consumable item and its ability to accept charge will reduce over time.

We will warranty it against mechanical and electrical defect for a period of three years - this does not cover fair wear and tear.

If the battery is not properly charged before first use, or regularly conditioned, its capacity will diminish.

Under these circumstances we will not replace the battery even if it is less than three years old.

The battery in the cordless tool is shipped in a low charge condition, and requires charging prior to use. Allow several cycles of charging and discharging (through use of the tool) for the battery to reach its optimum performance / runtime.

Note: The Lithium battery does not suffer from memory effect and once fully charged may be stored for up to six months without another charge.

While holding Tripod Area Light, peel open the charging port cover to expose the charging port.

1. To charge the Tripod Area Light with the 240V AC battery charger locate the charger adaptor on the end of the charging cable, lift the protective cap, insert the adaptor into the charger input port of the light.
2. Plug the 240V AC adaptor plug into your wall socket and turn ON the mains power.
3. When the Tripod Area Light is charging, the mode selection switch/indicator will illuminate RED. Once the battery is fully charged the mode selection switch/indicator will illuminate GREEN.

Note: The charging indicator will flash green when the Tripod Area Light is charging, when the product fully charged the charging indicator will illuminate green.

Turning the Tripod Area Light ON/OFF

Note: Always ensure that the Tripod Area Light is directed away from you or other bystanders before switching it on. The LED light output could cause damage to the eyes if directed at a bystander's eyes.

The Tripod Area Light has 4 different light settings Eco mode, Low mode, Med mode and High mode. The On/Off button requires to be pressed in the following sequence to activate each mode, 1st press: Eco - 2nd press: Low - 3rd press: Med - 4th press: High - 5th press: Off.

Color change technology

The Tripod Area Light features 5 different output colors. The color change button requires to be pressed in the following sequence to activate each level, 1st press: 2700K - 2nd press: 3500K - 3rd press: 4500K - 4th press: 5500K- 5th press: 6500K.

Cleaning and Maintenance



WARNING! Always ensure that the cordless tool is not connected to the mains supply before you start any maintenance work.

WARNING! Never use solvents or other harsh chemicals for cleaning any parts of the tool. These chemicals may weaken the plastic materials used in these parts, or can discolor the finish of the product. Use a cloth dampened only with water and mild soap. Never let any liquid get inside the tool; never immerse any part of the tool into a liquid.



WARNING! Do not use the cordless tool if a supply cord or important parts of the machine are damaged, e.g. charger.

To clean the cordless tool, wipe with a clean, soft cloth. Remove stubborn dirt with a damp cloth and a standard household cleaner. Never use cleaning agents containing alcohol, solvents or abrasives, as these will damage the housing.

Storage








 


Full charge the cordless tool before storing it for an extended period of time. Recharge regularly if not used for extended periods of time.

KINCROME

Tripod Area Light 6000 lumens

K10339

Description of Symbols

lm	Lumens	V	Volts	IP	Ingress protection from water, dust and debris
A	Amps (current)	mAh	Milli-Amp Hours		Regulatory Compliance Mark
	Class III protection		Do not look directly at light source		Conformity with European health, safety & environmental protection standard
	Approved for difficult conditions		Indoor use only		Read Instruction Manual
	The lamp can be hot in the area of light emission. Therefore, keep a distance of at least 0.1m		Switch mode transformer		Safety isolating transformer

Warranty



Our goods and services come with guarantees that cannot be excluded under the Australian Consumer Law. For major failures with the service, you are entitled: -to cancel your service contract with us; and -to a refund for the unused portion, or to compensation for its reduced value. You are also entitled to choose a refund or replacement for major failures with goods. If a failure with the goods or a service does not amount to a major failure, you are entitled to have the failure rectified in a reasonable time. If this is not done you are entitled to a refund for the goods and to cancel the contract for the service and obtain a refund of any unused portion. You are also entitled to be compensated for any other reasonably foreseeable loss or damage from a failure in the goods or service'. Kincrome Australia Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria (Tel 1300 657 528) also provides the Kincrome Lifetime Guarantee and 12-Month Warranty (Kincrome Express Warranties) in respect of some of its products. If a product is covered by a Kincrome Express Warranty and it has materials or workmanship defects (other than defects caused by abnormal or non warranted use) which are covered under the terms of the relevant Kincrome Express Warranty, you can, at your cost, send the product to the above address for repair or replacement. Your rights under a Kincrome Express Warranty are in addition to any other rights you have under the Australian Consumer Law or other applicable laws. For further details and terms please check our product guide, visit www.kincrome.com.au or call us. Every effort is made to ensure advertised stock is available, but due to factors beyond the control of Kincrome Australia Pty. Ltd, not all products advertised in this catalogue may be available at all stores. Kincrome Australia Pty, Ltd, reserves the right to correct printing errors. All sizes shown are approximate only. Accessories shown do not come with the product unless otherwise specified. Due to printing process, colours in this catalogue may vary slightly to actual item. E. & O. E.© Copyright 2022. Reproduction in whole or in part is prohibited without written approval.

Office Contact Details

 1300 657 528
  enquiries@kincrome.com.au
 1300 556 005
  www.kincrome.com.au

