

# POCKET POWER BANK

LITHIUM  
POLYMER  
BATTERY

SLIM LINE  
DESIGN

ABS  
PLASTIC  
BODY

CHARGES  
MOBILE  
DEVICES

**3.7V**  
5000mAh  
CAPACITY



ED1/APR15  
PART NO. KP152

## Table of Contents

Know your product .....	01
General safety warnings .....	02
Charging the Pocket Power Bank .....	03
Charging your device .....	03
Pocket Power Bank warranty .....	03


## Know your product

1. USB output
2. Micro USB input
3. Battery charge LED indicator
4. Adaptor storage (under Micro USB charging cable)
5. Micro USB charging cable
6. USB to Micro USB charging cable
7. iPhone 5/6 adaptor
8. iPhone 4 adaptor

### Pocket Power Bank - Back



### Pocket Power Bank - Front

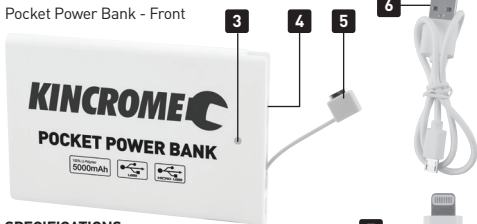

## SPECIFICATIONS

<b>MODEL NO:</b>	KP152
<b>INPUT:</b>	5VDC-1000mA
<b>OUTPUT:</b>	5VDC-1000mA MAX
<b>BATTERY:</b>	Li-Polymer
<b>CAPACITY:</b>	3.7V/5000mAh
<b>SIZE:</b>	96mm x 62mm x 12mm
<b>BODY:</b>	ABS Plastic



## GENERAL SAFETY WARNINGS

**WARNING!**

Don't allow any liquid to get inside Pocket Power Bank - Electric shock may result. To facilitate cooling of the battery pack after use, avoid placing the Pocket Power Bank in a warm environment such as in a metal shed or an un-insulated trailer.

1. Before charging, read all instructions and cautionary markings on the charging device and, Pocket Power Bank.
2. Do not place any object on top of the Pocket Power bank or place the Pocket Power Bank in a position near a heat source.
3. To reduce risk of damage to connector and cord, pull by the connector rather than the cord when disconnecting the Pocket Power Bank.
4. Make sure cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
5. Do not operate Pocket Power Bank if it has received a sharp blow, been dropped or otherwise damaged in any way. Have it checked by an electrician or power tool repairer.
6. Do not disassemble Pocket Power Bank. Take it to an electrician or power tool repairer when service or repair is required. Incorrect reassembling may result in a risk of electric shock, electrocution or fire.
7. To reduce risk of electric shock, unplug the charging device from the outlet before attempting any cleaning. Removing the battery pack will not reduce this risk.
8. Never attempt to connect 2 Portable Power Banks together.
9. DO NOT store or use the Pocket Power Bank in locations where the temperature may reach or exceed 40°C (such as inside sheds or metal buildings in summer).
10. The Pocket Power Bank is not fully charged out of the carton. First read the safety instructions and then follow the charging notes and procedures.
11. The longest life and best performance can be obtained if the Pocket Power Bank is charged when the air temperature is between 18 - 24°C. Do not charge the Pocket Power Bank in an air temperature below 10°C or above 40°C.  
This is important and will prevent damage to the battery pack.
12. Do not incinerate the Pocket Power Bank even if it is seriously damaged or is completely worn out. The battery can explode in a fire.
13. Never attempt to open the Pocket Power Bank for any reason. If the plastic housing of the battery pack breaks or cracks, immediately discontinue use & do not recharge.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.

**WARNING!**

When charging the Pocket Power Bank **DO NOT** charge any electronic devices. Make sure all electronic devices are disconnected from the Pocket Power Bank prior to charging.

## CHARGING THE POCKET POWER BANK

1. Using the included USB to Micro USB charging cable **(6)**, connect the USB connector to your computer or 5VDC output power source.
2. Connect the Micro USB connector to the Pocket Power Bank via the Micro USB input port **(2)**, the Pocket Power Bank will then commence charging.  
GREEN LED LIGHT FLASHING = Pocket Power Bank charging  
GREEN LED LIGHT ILLUMINATED = Pocket Power Bank fully charged

## CHARGING YOUR DEVICE

1. Connect the inbuilt Micro USB charging cable **(5)** from the Pocket Power Bank to your device via the Micro USB.
  - 2a. For iPhone 4, 5/6 devices attach the included adaptor to the inbuilt Micro USB charging cable **(5)** of the Pocket Power Bank then plug into your device.
  - 2b. Using your own device charging cable, insert your cable USB plug into the Pocket Power Bank USB output port **(1)**, then connect your charging cables device adaptor into your phone / device charging port.
- Your device will commence charging GREEN LED flashing- device charging

**NOTE:** Within the iPhone charging adaptors are electronic components that consume a small amount of power when left connected to the Micro USB charging cable **(5)**. To avoid shelf discharging of the Power Bank battery remove the iPhone adaptors from the Micro USB charging cable **(5)** after charging your device or when not using your Power Bank.

If the Pocket Power Bank has not been used regularly, recharge your Pocket Power Bank every 3 months for optimum performance.

Your Pocket Power Bank will charge the average mobile phone once and partially charge another prior to recharging being required.

**NOTE:** When the Pocket Power Bank battery is low (approx. 5% capacity), the battery charge LED indicator **(3)** will flash ON/OFF indicating the Pocket Power Bank requires immediate recharging.



Warranty given by Kincrome Australia Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria (Tel 1300 657 528). The applicable warranty period (12 months) commences on the date that the product is purchased. If this product has materials or workmanship defects (other than defects caused by abnormal or non warranted use) you can, at your cost, send the product to place of purchase, an authorised Kincrome service agent or one of Kincromes addresses for repair or replacement. Your rights under this warranty are in addition to any other rights you have under the Australian Consumer Law or other applicable laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For further details please visit [www.kincrome.com.au](http://www.kincrome.com.au) or call us. Due to minor changes in design or manufacture, the product you purchase may sometimes differ from the one shown on the packaging.