

KINCROME

PROFESSIONAL QUALITY TOOLS

INDUSTRIAL RANDOM ORBITAL SANDER 6" (150MM)

2
YEAR
WARRANTY

SWIRL
FREE
FINISHES

SELF
GENERATING
VACUUM

BALANCED
SANDING
PAD



K13250


ED1 December 15

Table of Contents

Know Your Product 1
 General Safety Instructions 2
 Additional Safety Instructions..... 3-4
 Assembly 4
 Operation 5-6
 Maintenance & Warranty 6
 Parts Breakdown 7

Know your product

 - 1. Dust Bag
- 2. Vacuum Hose
- 3. Air Inlet
- 4. Speed Lever
- 5. Hook & Loop Pad
- 6. Sander Body
- 7. Trigger
- 8. Vacuum Port/Exhaust
- 9. Nitto Style Fitting

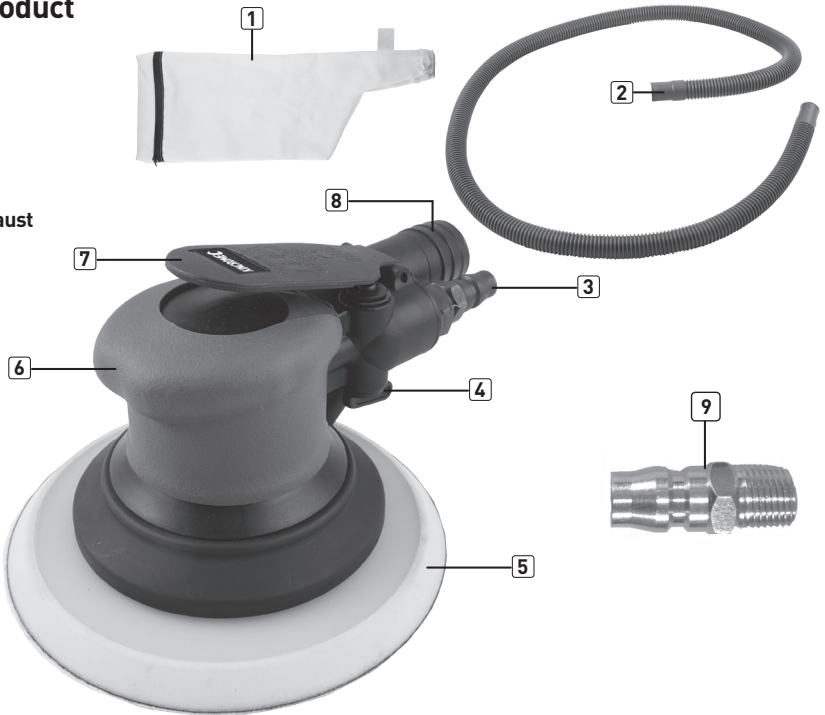

Model No:	K13250
Description:	Industrial Random Orbital Sander
Air Inlet:	1/4"
Orbit:	5mm
Average Air Consumption:	45.3 lpm (1.6cfm)
Free Speed:	11,000 RPM
Pad Diameter:	6" (150mm)
Air Pressure (max.):	90psi
Hose Length (max.):	10 Meters
Hose Diameter (min.):	10mm (3/8")
Weight:	0.9kg

General Safety Warnings



Save all warnings and instructions for future reference.

WARNING! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in serious injury.

1) Work Area

- a. **Keep the work area clean and well lit.** Cluttered benches and dark areas increase the risks of electric shock, fire, and injury to persons.
- b. **Keep bystanders, children, and visitors away while operating the tool.** Distractions can result in the loss of control of the tool.
- c. **Keep children and bystanders away while operating any powered products.** Distractions can cause you to lose control.

2) Personal Safety

- a. **Stay alert. Watch what you are doing and use common sense when operating the tool.** Do not use the tool while tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating the tool increases the risk of injury to persons.
- b. **Dress properly. Do not wear loose clothing or jewellery.** Contain long hair. Keep hair, clothing, and gloves away from moving parts. Loose clothes, jewellery, or long hair increases the risk of injury to persons as a result of being caught in moving parts.
- c. **Avoid unintentional starting.** Be sure the switch is off before connecting to the air supply. Do not carry the tool with your finger on the switch or connect the tool to the air supply with the switch on.
- d. **Remove adjusting keys and wrenches before turning the tool on.** A wrench or a key that is left attached to a rotating part of the tool increases the risk of personal injury.
- e. **Do not overreach.** Keep proper footing and balance at all times. Proper footing and balance enables better control of the tool in unexpected situations.
- f. **Use safety equipment.** A dust mask, non-skid safety shoes and a hard hat must be used for the applicable conditions. Wear heavy-duty work gloves during use.
- g. **Always wear eye protection.** Wear approved safety eye protection.
- h. **Always wear hearing protection when using the tool.** Prolonged exposure to high intensity noise can contribute to hearing loss.

3) Tool Use and Care

- a. **Use clamps or other practical ways to secure and support the workpiece to a stable platform.** Holding the work by hand or against the body is unstable and can lead to loss of control.
- b. **Do not force the tool. Use the correct tool for the application.** The correct tool will do the job better and safer at the rate for which the tool is designed.
- c. **Do not use the tool if the switch does not turn the tool on or off.** Any tool that cannot be controlled with the switch is dangerous and must be repaired, by an authorised repair agent.
- d. **Disconnect the tool from the air source before making any adjustments, changing accessories, or storing the tool. Such preventive safety measures reduce the risk of starting the tool unintentionally.** Turn off and detach the air supply, safely discharge any residual air pressure, and release the throttle and/or turn the switch to its off position before leaving the work area.
- e. **Store the tool when it is idle out of reach of children and other untrained persons.** A tool is dangerous in the hands of untrained users.
- f. **Maintain the tool with care.** A properly maintained tool is easier to control.
- g. **Check for misalignment or binding of moving parts, breakage of parts, and any other condition that affects the tool's operation.** If damaged, have the tool serviced before using, at an authorised Kincrome repair agent. Many accidents are caused by poorly maintained tools.
- h. **Use only accessories that are identified by the manufacturer for the specific tool model.** Use of an accessory not intended for use with the specific tool model, increases the risk of injury to persons.

4) Service





- a. Tool service must be performed only by qualified repair personnel.
- b. When servicing the Random Orbital Sander, use only identical replacement parts. Use only authorized parts.
- c. Use only the lubricants specified by the manufacturer.

5) Additional Safety Warnings

- a. The warnings and precautions discussed in this manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.
- b. Only use with accessories rated to handle the forces exerted by this tool during operation. Other accessories not designed for the forces generated may break and forcefully launch pieces.
- c. Attach all accessories properly to the tool before connecting the air supply. A loose accessory may detach or break during operation.
- d. Thoroughly read and understand the manual for the air compressor used to power this tool. Install an in-line shutoff valve to allow immediate control over the air supply in an emergency, even if a hose is ruptured.
- e. Use this tool with both hands only. Using tools with only one hand can result in loss of control.
- f. Do not lay the tool down until it has come to a complete stop. Moving parts can grab the surface and pull the tool out of your control.
- g. Do not force the tool. Use a larger one if needed.
- h. Do not hold adapters or discs during use.
- i. Anyone using vibrating tools regularly, or for an extended period should first be examined by a doctor and then have regular medical check-ups to ensure medical problems are not being caused or worsened from use. Pregnant women or people who have impaired blood circulation to the hand, past hand injuries, nervous system disorders, diabetes, or Raynaud's Disease should not use this tool. If you feel any symptoms related to vibration (such as tingling, numbness, and white or blue fingers), immediately discontinue use and seek medical advice as soon as possible.
- j. Do not smoke during use. Nicotine reduces the blood supply to the hands and fingers, increasing the risk of vibration related injury.
- k. Wear suitable gloves to reduce the vibration effects on the user.

6) Description of Symbols

The following symbols could be shown on the tool:

	Read the instruction manual before use.		Risk of Explosion
	Wear Ear Protection		Wear Eye Protection
no	No-load speed, Free Speed	CFM	Cubic Feet per Minute flow
.../min, RPM	Revolutions per minute	SCFM	Cubic Feet per Minute flow at standard conditions
PSI	Pounds per square inch of pressure	NPT	National pipe thread, tapered
ft-lb	Foot-pounds of torque	BSP	British standard pipe
Nm	Newton meters of force		

7) Additional Safety instruction for Air Sanders

1. **Hold air tool by insulated gripping surfaces, as the sanding pad may contact its own air hose.** Cutting a “live” air hose may cause hose to rupture and pose a hazard to yourself and others.
2. **Disposing of dust. Be extremely careful of dust disposal, materials in fine particle form may be explosive.** Do not throw sanding dust on an open fire. Spontaneous combustion, may in time, result from a mixture of oil or water with dust particles.
3. **Always wear eye protection and a dust mask for dusty applications and when sanding overhead.** Sanding particles can be absorbed by your eyes and inhaled easily and may cause health complications.
4. **Use special precautions when sanding chemically pressure treated timber, paint that may be lead based, or any other materials that may contain carcinogens.** A suitable breathing respirator and protective clothing must be worn by all persons entering the work area. Work should be sealed by plastic sheeting and persons not protected should be kept out until work area is thoroughly cleaned.
5. **Do not ‘wet sand’ with this sander.** Liquids entering the motor housing will cause corrosion.
6. **Do not use sandpaper intended for larger sanding pads.** Larger sandpaper will extend beyond the sanding pad causing snagging, tearing of the paper or kick-back. Extra paper extending beyond the sanding pad can also cause serious lacerations.



WARNING! Some dust created by power sanding, sawing, grinding, drilling and other construction activities contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints;
- Crystalline silica from bricks, cement and other masonry products, and;
- Arsenic and chromium from chemically-treated timber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well-ventilated area and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles.

8) Before Starting

TO PREVENT SERIOUS INJURY FROM EXPLOSION:

Verify compressor is off before setup. Use only clean, dry, regulated, compressed air to power this tool. Do not use oxygen, carbon dioxide, combustible gases, or any other bottled gas as a power source for this tool.

1. It is recommended a filter, regulator with pressure gauge, oiler, in-line shut-off valve, and quick coupler be fitted for optimal operation, as shown on Figure A.
2. An in-line shut-off ball valve is an important safety device, it will shut-off the air supply even if the air hose is ruptured. The shut-off valve should be a ball valve because it can be closed quickly.

Note: If an automatic oiler system is not used, add a 4 to 5 drops of Kincrome Air Tool Oil to the air inlet (3) before operation.

Add 1-2 more drops every hour of continual use.

3. Attach an air hose to the compressor’s air outlet. Connect the air hose to the air inlet (3) of the tool. Other components, such as a quick connect fitting and quick connect coupler, will make operation more efficient, but are not required.


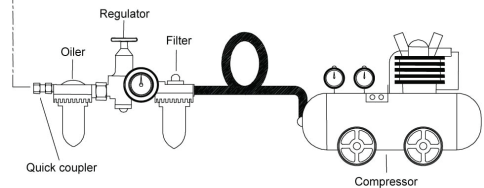 


Figure A

 

WARNING! Do not install a quick coupler directly on the tool. Couplers contains an air valve that will allow the air tool to retain pressure and inadvertently operate after the air supply is disconnected.

4. The air hose must be long enough to reach the work area and allow free movement while working.
5. Turn on the air compressor according to the manufacturer’s directions and allow the tank to build up pressure until it cuts-off.
6. Adjust the air compressor’s regulator so that the air output is at the tools recommended working pressure, the output must not exceed the tool’s maximum air pressure at any time. Adjust the pressure gradually, while checking the air output gauge to set the optimal pressure range.
7. Inspect all air connections for leaks. Repair any leaks.
8. If the tool is not be used, turn off and detach the air supply, safely discharge any residual air pressure, and release the trigger (9) and/or turn the tools switch to its off position to prevent inadvertent operation.

9) Assembly

Assembling the Dust Bag directly to the sander.

1. Disconnect the air hose from the air inlet (3) and feed the air hose through the loop on the dust bag (1).

Note: This will keep the dust bag (1) away from the sander while in operation.

2. Get the dust bag (1) and feed the open end over the vacuum port (8).
3. Once it has been fed over the vacuum port (8), tie up the dust bags (1) laces to secure the dust bag (2) to the sander.

Note: Do not leave hanging dust bag (1) laces free, as they will get caught by the hook & loop pad (5)

Assembling the Dust Bag Via the Extraction Hose

1. Get the vacuum hose (2) and fit either end of it over the vacuum port (8) of the sander.
2. Get the dust bag (1) and feed the open end over the vacuum hose (2).
3. Once it has been fed over the vacuum hose (2), tie up the dust bags (1) laces to secure the dust bag (1) to the vacuum hose (2).

Assembly for use with Auxiliary Dust Extraction system.

1. Get the vacuum hose (2) and fit either end of it over the vacuum port (8) of the sander.
2. Get the free end of the vacuum hose (2) and feed into your vacuum wand.

Note: All vacuum wands vary, so an adaptor may be required.

Attaching/Removing a sanding pad

1. Firstly detach the Random Orbit Sander from the air supply.
2. Carefully peel paper backing from the pressure sensitive adhesive type sanding disc.
3. Align holes on sanding disc with holes on the hook & loop pad (5), then carefully press sticky side of disc against pad as tight as possible.

Note: Holes in sanding disc must line up with holes in the hook & loop pad (5) in order for the self generating vacuum feature of your sander to function properly.

Note: It is recommended that you clean the hook & loop pad (5) occasionally by brushing lightly with a small brush, or micro-fibre cloth. Dust build-up on the hook & loop pad (5) could cause sanding disc not to stick properly.

10) Operation

Sandpaper Selection

Selecting the correct grit of sandpaper is an important step in achieving optimum results. Coarse grit will remove the most material. Finer grit will produce a smoother finish. The condition of the workpiece will determine the grit of the sandpaper to be used. The higher the grit number, the finer the grade of sandpaper.

If the surface is rough, start with a coarse grit and sand until the surface is uniform. Medium grit may then be used to remove scratches left by the coarser grit. Finer grit is then used to finish the surface. Always continue sanding with each grade of sandpaper until the surface is uniform.

Sanding Tips

Never force the sander. The weight of the sander supplies adequate pressure, allowing the sandpaper to do the work.

Applying additional pressure will greatly reduce the sander speed, rapidly wear the sandpaper. This will slow the removal rate, sander's rapid action may remove too much material, creating an uneven surface and a poor finish

The random orbital action of your sander allows you to sand with the grain, or at any angle across it for most sanding jobs. In the final stages a better finish will be achieved by sanding with the grain.

1. Screw in Nitto Style Fitting (9) to the air inlet (3). Thread (teflon) tape may be required to ensure a leak free seal.
2. The ultimate speed of the sander can be adjusted up or down by turning the speed lever (4) to the left or right.
3. Select the most suitable sanding paper for the job at hand, and attach to hook & loop pad (5) as stated in the "Assembly, Adding/Removing Sanding Pads section of this manual".

- Once you have selected the suitable abrasive disc start the random orbit sander by holding down the trigger (7) and bring the hook & loop pad (5), slowly and evenly to the surface of the material. Moving the sanding disc back and forth overlapping the desired area.
 - Remove the sander from the work surface before stopping the sander.
- Note:** Regularly check the hook & loop pad (5) for wear, always change a cracked or damaged disc.
- If Random Orbit Sander requires more power to accomplish task, ensure that the tool is receiving sufficient, un-obstructed airflow and/or increase the speed of the hook & loop pad (5), by rotating the speed lever (4) to the left or right.
 - Increase/decrease the pressure (PSI) output of regulator ensuring you do not exceed the rated maximum inlet air pressure of the tool (90PSI).

Caution: If tool still does not have sufficient force at maximum pressure and sufficient airflow, then a larger tool may be required.

11) Cleaning, Maintenance, and Lubrication

Note: These procedures are in addition to the regular checks and maintenance explained as part of the regular operation of the air-operated tool. The air motor and bearing uses compressed air to power the tool. Moisture in compressed air will rust the motor components, you must lubricate the motor with Kinchrome Air Tool Oil daily.

Cleaning

- Regularly blow dirt and dust out of all air vents with clean, dry air at least once a week. To minimize the risk of eye injury, always wear approved eye protection.



WARNING! Never use solvents or other harsh chemicals for cleaning the non-metallic parts of the tool.

These chemicals may weaken the plastic materials used in these parts. Use a cloth dampened only with water and mild soap. Never let any liquid get inside the tool; never immerse any part of the tool into a liquid.

Lubrication

Note: Remove vacuum hose (2) from vacuum port/exhaust (8) before lubricating the Random Orbital Sander.

- Disconnect the tool from the air supply holding it so the air inlet (3) faces up.
- Hold the trigger (7) down and put 4 to 5 drops of Kinchrome Air Tool Oil in the air inlet. Holding the trigger (7) down helps circulate oil in the motor.
- Connect the tool to air supply, cover the vacuum port/exhaust (8) with a towel and run for a few seconds.



WARNING! Any excess oil in the motor is immediately expelled from the vacuum port/exhaust (8). Always face the vacuum port/exhaust (8) away from people or objects.

Storage

 
- Avoid storing the tool in a location subject to high humidity. If the tool is left as it is used, the residual moisture inside the tool can cause rust. Before storing and after operation, oil the tool and run it for a short time.
- Regular inspection should be carried out of sanding pads, spindles, threads, and clamping devices irrespective of wear.

12) Warranty

Warranty given by Kinchrome Australia Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria (Tel 1300 657 528). The applicable warranty period (24 months) commences on the date that the product is purchased. If this product has materials or workmanship defects (other than defects caused by abnormal or non warranted use) you can, at your cost, send the product to place of purchase, an authorised Kinchrome service agent or one of Kinchromes addresses for repair or replacement. Your rights under this warranty are in addition to any other rights you have under the Australian Consumer Law or other applicable laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For further details please visit www.kinchrome.com.au or call us. Due to minor changes in design or manufacture, the product you purchase may sometimes differ from the one shown on the packaging.

IMPORTANT! If the tool fails to operate correctly, call customer service on 1800 657 528 for advice on the best resolution for your situation. If a resolution cannot be achieved over the phone please take the tool and all related accessories to an authorised service centre or place of purchase showing proof of purchase for assistance.

13) Parts Breakdown

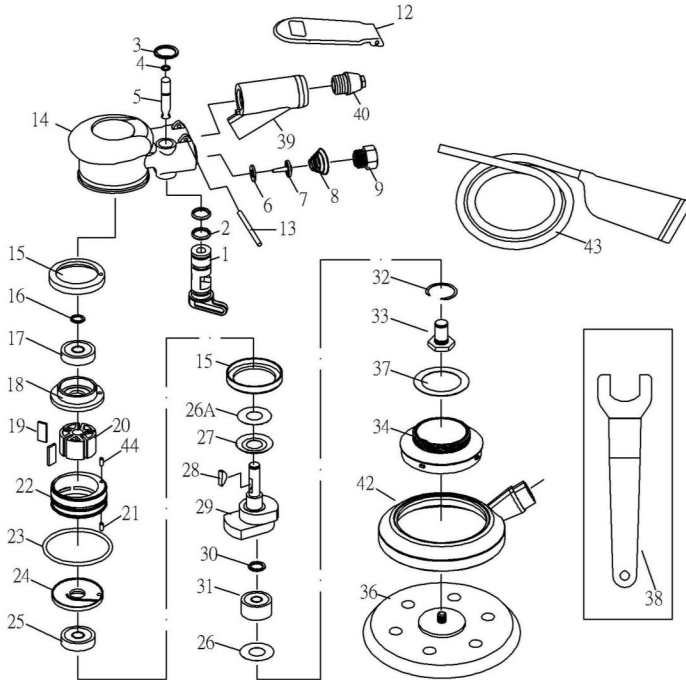

NO	PART NO	DESCRIPTION	QTY
01	K13250-1	REGULATOR	1
02	K13250-2	O-RING	2
03	K13250-3	SNAP RING	1
04	K13250-4	O-RING	1
05	K13250-5	VALVE STEM	1
06	K13250-6	WASHER	1
07	K13250-7	VALVE	1
08	K13250-8	SPRING	1
09	K13250-9	AIR INLET	1
12	* K13250-12	LEVER	1
13	* K13250-13	PIN(3.3*26)	1
14	K13250-14	HOUSING	1
15	K13250-15	RUBBER BUSHING	2
16	K13250-16	SNAP RING	1
17	K13250-17	BEARING (6000ZZ)	1
18	K13250-18	REAR PLATE	1
19	* K13250-19	ROTOR BLADE	5
20	K13250-20	ROTOR	1
21	K13250-21	PIN(3*8)	1
22	K13250-22	CYLINDER	1
23	K13250-23	O-RING	1

NO	PART NO	DESCRIPTION	QTY
24	K13250-24	FRONT PLATE	1
25	K13250-25	BEARING(6002ZZ)	1
26	K13250-26	WASHER(0.5M/M)	1
26A	K13250-26A	WASHER(0.4M/M)	1
27	K13250-27	WASHER(0.2M/M)	1
28	K13250-28	ROTOR KEY	1
29	K13250-29	MOTOR SHAFT BALANCER(6")	1
30	K13250-30	SNAP RING	1
31	K13250-31	BEARING(5001)	1
32	K13250-32	SNAP RING	1
33	K13250-33	SHAFT	1
34	K13250-34	HOUSING COVER	1
36	* K13250-36	PAD HOOK-UP	1
37	K13250-37	WASHER	1
38	* K13250-38	STOP SPANNER	1
39	K13250-39	VACUUM ADAPTER	1
40	K13250-40	CONE MUFFLER NUT	1
42	* K13250-42	SHROUD	1
43	* K13250-43	RUBBER HOSE & BAG	1
44	K13250-44	PIN (3*14L)	1

Kincrome reserve the right to change spare parts at any time without notice

* Indicates stocked spare parts

Notes:

KINCROME 
PROFESSIONAL QUALITY TOOLS®

www.kincrome.com.au