

# KINCROME

# EVOLUTION

# Tool Trolley

10 Drawer Wide  
1052mm (41")

K7945

## Operation Manual



### IMPORTANT:

This operating manual contains important safety information, read carefully & understand all information before operating the trolley. Save this manual for future use.



Do not open more than one drawer at a time.



Do not step on drawers.



Do not let children near the Toolbox.



Do not separate Chest from Trolley.



Do not exceed Drawer Load Limit.



Not suitable for mounting in Vehicles.



Lock drawers and lid before moving the Toolbox.



**WARNING**

## Parts List



### Measurements:

**Weight: 74 kg**

(External - With Castors - 125 x 50mm (5 x 2") x2 Locking)

WIDTH	1052 mm	DEPTH	466 mm	HEIGHT	963 mm
-------	---------	-------	--------	--------	--------

### Measurements - Top Section

WIDTH	1042 mm	DEPTH	466 mm	HEIGHT	15 mm
-------	---------	-------	--------	--------	-------

### Large Shallow Drawers

WIDTH	566 mm	DEPTH	405 mm	HEIGHT	62 mm
-------	--------	-------	--------	--------	-------

### Large Extra Deep Drawer

WIDTH	566 mm	DEPTH	405 mm	HEIGHT	224 mm
-------	--------	-------	--------	--------	--------

### Small Shallow Drawers

WIDTH	316 mm	DEPTH	405 mm	HEIGHT	62 mm
-------	--------	-------	--------	--------	-------

### Small Deep Drawers

WIDTH	316 mm	DEPTH	405 mm	HEIGHT	143 mm
-------	--------	-------	--------	--------	--------

### Small Extra Deep Drawer

WIDTH	316 mm	DEPTH	405 mm	HEIGHT	224 mm
-------	--------	-------	--------	--------	--------

### Top Long Drawer

WIDTH	948 mm	DEPTH	405 mm	HEIGHT	104 mm
-------	--------	-------	--------	--------	--------

## Included



Keys x 2



Trolley Handle x 1



4 x Hex 5mm Bolts for Trolley Handle




13mm x 16 Bolts (16) for Castors (with Washers)



Non-Locking Castors (2)



Locking Castors (2)



11 x Liners

**Tools & Assistance  
Required for Trolley:**



2 People



**For Castors:**  
13mm Spanner



**For Handle:**  
5mm Hex Key

# Tool Trolley

10 Drawer Wide  
1052mm (41")

K7945

## Assembly Instructions

### 1 Handle Installing

- Position the trolley side handle behind the holes on the trolley.
- Attach with (4) bolts, and tighten with a 5mm Hex Key.




### 2 Castor Installing (If applicable)

- Be sure the drawers are locked and lay the trolley on its side.
- Secure castors to the unit using the 13mm bolts provided.
- Tighten with a 13mm Spanner.
- Repeat this process for the castors on the opposite of the trolley.
- Return the trolley to its upright position.

**Caution:** Do not over tighten the bolts.


**Caution:** Both locking castors must be fitted to front of trolley.

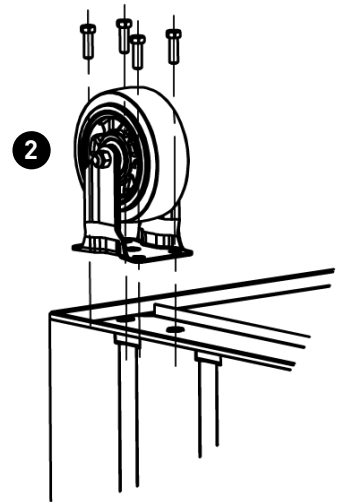


## Maintenance

### 1 Removing the Drawers

- Fully extend the empty drawer.
- Push up the right grey release lever while pushing down the left grey release lever.
- Pull the drawer outward until it is released from the drawer slide.

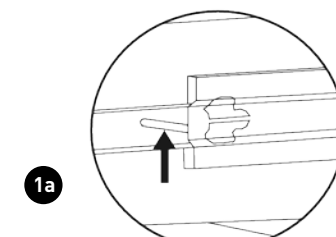

Push up the right grey release lever

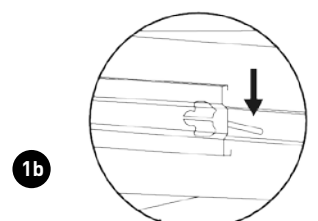

Pull down the left grey release lever

### 2 Re-Inserting The Drawers

- Extend the drawer slides.
- Insert the brackets on each side of the drawer into the slots on the slides, being careful that they are properly positioned.
- Once properly inserted, completely close the drawer to set the slides in their proper positions.

- Periodically tighten all hardware
- Periodically lubricate castors
- Lubricate the slides twice a year
- Lubricate the lock with graphite annually
- Use a damp Microfibre cloth to clean all surfaces

**Tool Trolley**

10 Drawer Wide  
1052mm (41")

K7945

**Parts List**



**Spare Parts**

ITEM	PART NO.	DESCRIPTION	QUANTITY	ITEM	PART NO.	DESCRIPTION	QUANTITY
1	K7999-10	Lock & Key	1	5	K7999-26	Eva Mat Pack 11 Pce	1
2	K7999-11	Key Only (Specify Number)	1	6	K7999-13	Castor Swivel x 1	2
3	K7999-12	Trolley Handle	1	7	K7999-14	Castor Swivel x 1 (Brake)	2
4	K7999-8	Ball Bearing Slide (Pair)	7	8	K7999-15	Castor Bolt Pack	1