

TOOL TROLLEY

20 DRAWER SUPER WIDE BODY 60"

K7862

Operation Manual

Caution: Take Safety Precautions When Using Your Toolbox







Do not let childre



Do not separate



Do not exceed Not su



Not suitable for mounting in Vehicle



Lock drawers and lid before moving the Toolbo



Parts List



TOOL TROLLEY SPECIFICATIONS

A IMPORTANT:

OPERATING TOOL TROLLEY.

THIS OPERATING MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. READ CAREFULLY AND

UNDERSTAND ALL INFORMATION BEFORE

SAVE THIS MANUAL FOR FUTURE USE

Overall	Width	Depth	Height
(with castors)	1525mm	475mm	975mm
(without castors)	1525mm	475mm	790mm
Wide Drawers (Shallow)	650mm	400mm	65mm
Large Drawers (Shallow)	545mm	400mm	500mm
Medium Drawers (Deep)	545mm	400mm	134mm
Small Drawers (Shallow)	120mm	400mm	41mm
Small Drawers (Deep)	120mm	400mm	134mm
Side Tray	175mm	300mm	12mm
Castor Size:	125mm x 50mm (5" x 2") x 2 Locking		
Weight	165Kg		

Assembly Instructions



Kevs x 2




Trolley Handle x 1



8 x Hex Bolts for Push Handle



Power Handle x 1



20 x EVA Liners

TOOLS & ASSISTANCE NEEDED



2 People Lift



5mm Hex Key

1



NCROMEC TOOL TROLLEY

20 DRAWER SUPER WIDE BODY 60"

K7862

Assembly Instructions

Step 1: Get assistance to lift the trolley and slide the pallet from under the trolley. Castors are pre fitted.

Step 2: Using the 5mm Hex key provided, attach the 2 side trolley handles.

REVERSIBLE WORK SURFACE (STAINLESS STEEL OR MDF)

DUAL TROLLEY HANDLES

FOLDING SIDE SHELVES



LOCKABLE SWIVEL SUSPENSION CASTORS






STORAGE OPTIONS

Can Accept 1 Or 2 K7526 Black Series Contour Chests. (Sold Separately)

1 Handle Installing


- Position the trolley side handle behind the holes on the trolley.
- Attach with (4) bolts, and tighten with a 5mm Hex Key.

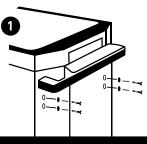

Maintenance


1 Removing the Drawers

- Fully extend the empty drawer.
- Push up the right grey release lever while pushing down the left grey release lever.
- Pull the drawer outward until it is released from the drawer slide.

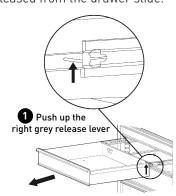

2 Re-Inserting The Drawers

- Extend the drawer slides.
- Insert the brackets on each side of the drawer into the slots on the slides, being careful that they are properly positioned.
- Once properly inserted, completely close the drawer to set the slides in their proper positions.

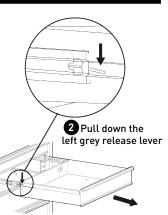

MAINTENANCE

- Periodically tighten all hardware
- Periodically lubricate castors
- Lubricate the slides twice a year
- Lubricate the lock with graphite annually
- Use a damp Microfibre cloth to clean all surfaces

2



KINCROMEC TOOL TROLLEY

20 DRAWER SUPER WIDE BODY 60"

K7862

Replacement Parts



REPLACEMENT PARTS

ITEM	PART NO.	DESCRIPTION	QUANTITY
1	K7778	Lock & Key	1
2	K7779	Key Only (Specify Number)	1
3	K7862-2	Plastic Trolley Top (1)	1
4	K7759-5	Trolley Handle (1)	1
5	K7741	Power Trolley Handle	1

ITEM	PART NO.	DESCRIPTION	QUANTITY
6	K7747-16	Ball Bearing Slides Pair (2)	20
7	K7862-13	Swivel Castor (1)	4
8	K7862-14	Swivel Castor (Brake) (1)	2
9	K7862-15	Castor Nut & Bolt Kit	1
10	K7862-17	Eva Mat Pack (20)	20



National Head Office National Distribution and Showroom 3 Lakeview Dve, Caribbean Business Park Scoresby Victoria 3179 Australia ABN 41 007 185 006

Administration

T+61 3 9730 7100 F+61 3 9730 7199

E enquiries@kincrome.com.au W kincrome.com.au

Customer Service Centre

T 1300 657 528 F 1300 556 005

Made to Kincrome Tools & Equipment Pty Ltd Global specifications and quality standards in China

MINCHOTTE ON ENGT O BOX 040 EASTELIOTT 3030 01VA					
Australia & Global	UK & EU www.kincrome.co.uk				
www.kincrome.com.au					
enquiries@kincrome.com.au	enquiries@kincrome.co.uk				

3

9/05/2018 12:52 PM K7862 Manual.indd 3