

KINCROME 
PROFESSIONAL QUALITY TOOLS

MICRO TORQUE WRENCH CLICK-TYPE

2-10Nm
TORQUE
RANGE

60 TOOTH
RATCHET
HEAD
DESIGN

DUAL
SCALE

ACCURACY
+/- 4%

1/4"
SQ DRIVE

PROTECTIVE
BLOW
MOULD
CASE



K8036


ED1 MARCH 2017

Table Of Contents

Know Your Product	2
General Safety Instructions	3
How To Use Your Micro Torque Wrench	3-4
Tips & Tricks For Your Micro Torque Wrench.....	5
Torque Measurement Conversions.....	6
Spare Parts	7
Care & Maintenance.....	7
Warranty.....	7

Know Your Product

1. 1/4" Square Drive
2. Quick Release Button
3. Forward/Reverse Switch
- 4a. Nm Scale
- 4b. lbf-in Scale(not shown)
5. Micro Scale (Nm & lbf-in)
6. Locking Ring
7. Knurled Grip

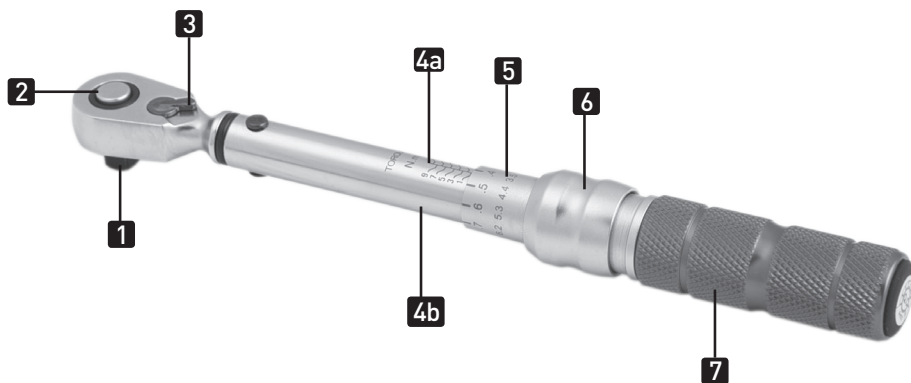

SPECIFICATIONS	
Part No:	K8036
Drive Size:	1/4" Square Drive
Accuracy:	+ / - 4% of Setting
Tool Length:	193mm
Dual Scale:	Nm/lbf-in
Torque Range:	2-10Nm/13.3 - 92.9 lbf-in
Weight:	180g

GENERAL SAFETY WARNINGS



1. Please study these instructions carefully before attempting to operate this wrench.
2. Never apply more torque than the maximum scale reading.
3. This torque wrench is designed for manual tightening of threaded fasteners only. **DO NOT USE IT AS A NUT-BREAKER OR FOR ANY OTHER PURPOSE.**
4. Over torqued or defective fasteners and sockets may suddenly break. **TO PREVENT INJURY, KEEP PROPER FOOTING AND BALANCE AT ALL TIMES. DO NOT USE THE WRENCH IN PLACES FROM WHICH YOU MAY FALL OR SLIP, OR AROUND ROTATING MACHINERY.**
5. This torque wrench will not prevent you from applying more torque than set - this is not a torque limiting tool. Learn how different amounts of torque 'feel' so you will reduce the possibility of damage and/or injury due to accidental over torquing.
6. **APPLY FORCE TO THE GRIP ONLY. DO NOT USE 'CHEATER BARS'**.
e.g. (A piece of pipe placed over the hand grip).
7. All torque wrenches should be calibrated at least once every 12 months or every 1,000 cycles, whichever comes first. (See care and maintenance section on pg.7 for full care procedure).
8. This torque wrench operates in both directions, to tighten left and right threads.
9. Lifetime Warranty does not cover calibration.
10. Be sure all components, including all adaptors, extensions drivers and sockets are rated to match or exceed the torque being applied. (See pg.6 for calculating the effect of torque wrench extensions).
11. Always pull, do not push on the wrench handle and adjust your stance to prevent a possible fall should something give.

HOW TO USE YOUR MICRO TORQUE WRENCH





WARNING!



1. Your Torque Wrench is a precision instrument and should be treated as such.
2. Always store your Torque Wrench in the protective blow mould case.
3. If your Kincrome Torque Wrench is dropped, knocked, even in the protective blow mould case, or any part replaced, the wrench must be immediately re-calibrated prior to next use.
4. Ensure torque wrench is stored at its lowest setting. Calibration costs are the responsibility of the owner/user of the wrench.
5. Although the Torque Wrench has incremental markings less than 2Nm, the Torque Wrench is calibrated/certified starting from the 2Nm (13.3lbf-in).

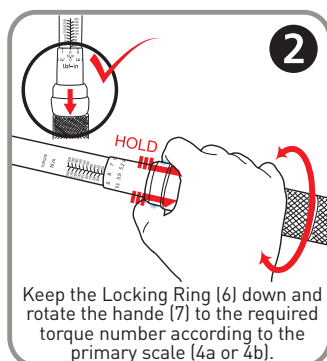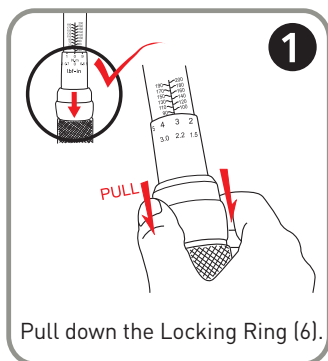


HOW TO USE YOUR TORQUE WRENCH (Continued)

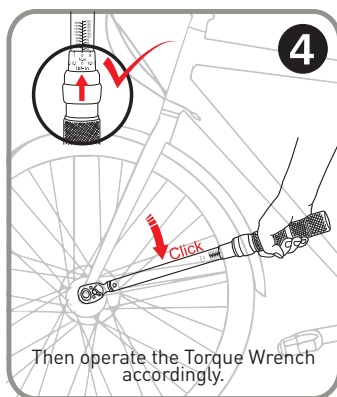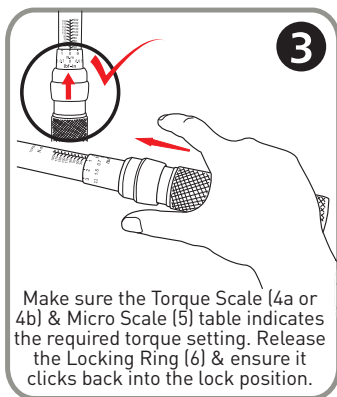


EXAMPLES OF TORQUE SETTINGS

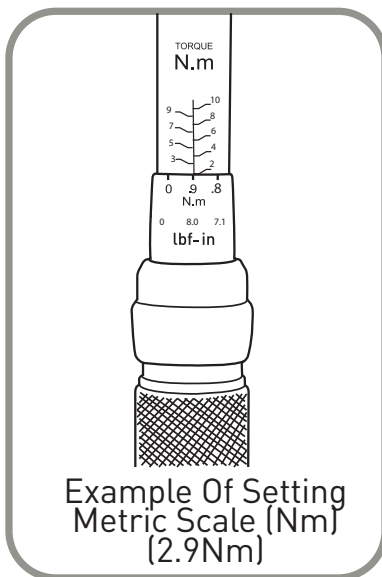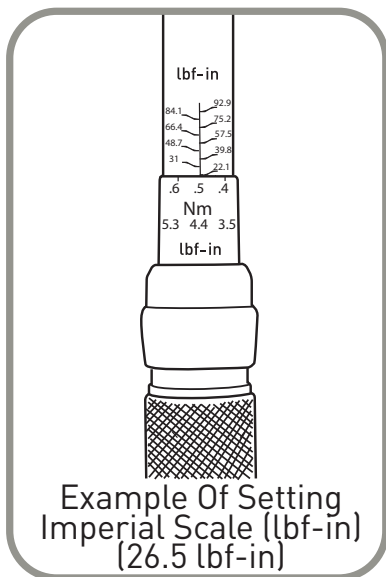


TIPS & TRICKS FOR YOUR MINI TORQUE WRENCH

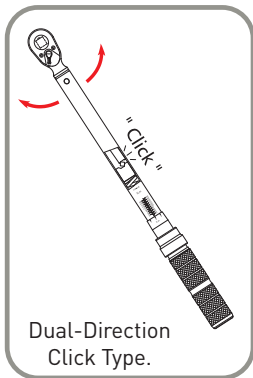


Dual-Direction
Click Type.

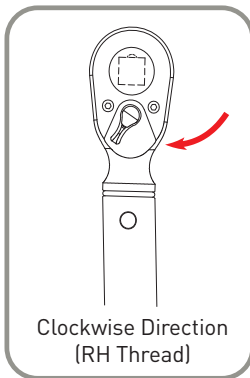


Clockwise Direction
(RH Thread)

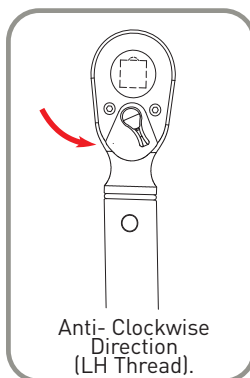


Anti- Clockwise
Direction
(LH Thread).

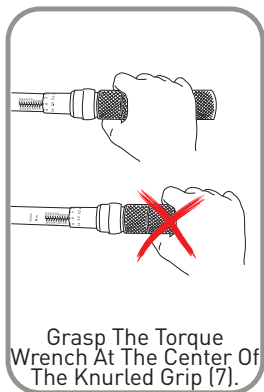


Grasp The Torque
Wrench At The Center Of
The Knurled Grip (7).

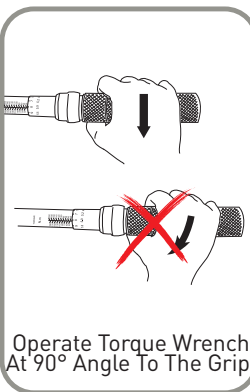


Operate Torque Wrench
At 90° Angle To The Grip.

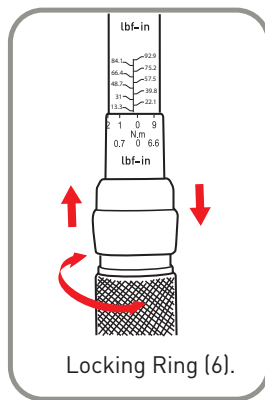

Locking Ring (6).

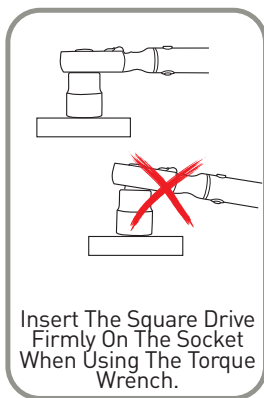

Insert The Square Drive
Firmly On The Socket
When Using The Torque
Wrench.

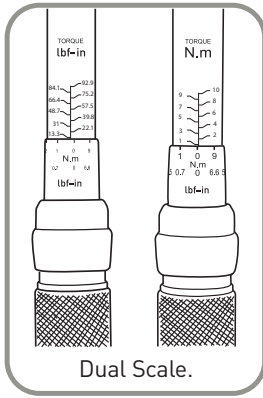

Dual Scale.

CONVERSION TABLES


Metric Units

Main Torque Range	Secondary Torque Range	Square Drive	Fine Scale	Length (mm)	Width (mm)
2~10Nm	13.3~92.3 lbf-in	1/4"	0.1 Nm	193	20.3
5~25Nm	39.8~225.7 lbf-in	1/4"	0.1 Nm	245	27.3
5~25Nm	39.8~225.7 lbf-in	3/8"	0.1 Nm	245	27.3
20~100Nm	9.2~75.6 lbf-ft	3/8"	0.5 Nm	410	36.4
40~200Nm	18.4~151.2 lbf-ft	1/2"	1 Nm	520	41
60~340Nm	36.9~258.1 lbf-ft	1/2"	2 Nm	610	41
110~550Nm	83~414.9 lbf-ft	3/4"	2.5 Nm	925	58
150~750Nm	92.2~571.6 lbf-ft	3/4"	5 Nm	1125	58
200~1000Nm	92.2~756 lbf-ft	1"	5 Nm	1225	67

Imperial Units

Main Torque Range	Secondary Torque Range	Square Drive	Fine Scale	Length (mm)	Width (mm)
50~250 lbf-in	6.2~28.8 Nm	1/4"	1 lbf-in	245	27.3
50~250 lbf-in	6.2~28.8 Nm	3/8"	1 lbf-in	245	27.3
15~75 lbf-ft	23.7~105.1 Nm	3/8"	0.5 lbf-ft	410	36.4
10~150 lbf-ft	20.3~210.1 Nm	1/2"	1 lbf-ft	520	41
30~250 lbf-ft	47.4~345.7 Nm	1/2"	2 lbf-ft	610	41
80~400 lbf-ft	142.3~559.2 Nm	3/4"	2.5 lbf-ft	925	58
110~550 lbf-ft	183~779.5 Nm	3/4"	2.5 lbf-ft	1125	58
150~750 lbf-ft	237.2~1050.6 Nm	1"	5 lbf-ft	1225	67

FORMULA FOR CALCULATING THE EFFECT OF TORQUE WRENCH EXTENSIONS

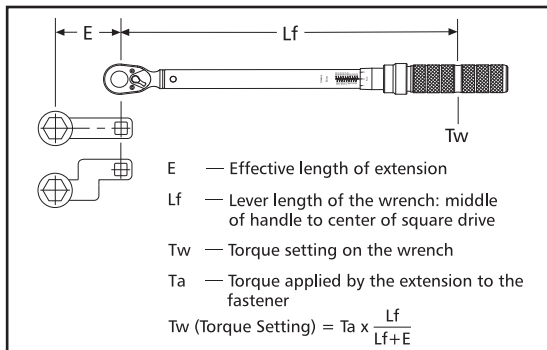

SPARE PARTS

- **K8036-1** Ratchet Repair Kit

CARE AND MAINTENANCE

It is normal for torque wrenches to go out of calibration with time and regular use.

Whatever type of torque wrench you are using, regular calibration will ensure that your tools remain as accurate and effective as possible.

Putting in place a regular schedule for verifying and calibrating your torque wrench will mean less room for error.

Kincrome Tools and Equipment recommend you have your torque wrench calibrated by a NATA approved calibration facility, every 12 months or 1,000 cycles.

If your Kincrome Torque Wrench is dropped, knocked, even in the protective blow mould case, or any part replaced, the wrench must be immediately re-calibrated prior to next use.

Your new Kincrome Torque Wrench is calibrated at the factory in Taiwan, prior to shipping and a certificate of that calibration is supplied for your individually serialised torque wrench. It is the sole responsibility of the owner/user of this tool to ensure the calibration is correct as the Torque Wrench may have gone out of calibration during transit to retailers.

For peace of mind, you should get your torque wrench checked prior to first use.

Please note, the Kincrome Limited lifetime warranty does not cover the cost of calibration, or the removable square drive of the wrench.

Kincrome will not be liable for any damage caused from using an uncalibrated or defective Torque Wrench, due to failing to follow the correct maintenance, calibration and storage instructions within this manual.

WARRANTY

Warranty given by Kincrome Tools & Equipment Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria, Australia (Tel +61 3 9730 7100) If this product has materials or workmanship defects (other than defects caused by abnormal or non warranted use) you can, at your cost, send the product to place of purchase, an authorised Kincrome service agent or one of Kincromes addresses for repair or replacement. Your rights under this warranty are in addition to any other rights you have under the Australian, United Kingdom & Ireland Consumer Law or other applicable laws. Our goods come with guarantees that cannot be excluded under the Australian, United Kingdom & Ireland Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For further details please visit www.kincrome.com.au or call us. Due to minor changes in design or manufacture, the product you purchase may sometimes differ from the one shown on the packaging.



www.kincrome.com.au