KINCROMEC EVOLUTION

Tool Trolley 5 Drawer 675mm (26")

K7925

Operation Manual

This operating manual contains important safety information, **IMPORTANT:** read carefully & understand all information before operating the trolley. Save this manual for future use. 40kg-Do not open more than Do not step on Do not let children Do not exceed Not suitable for Lock dra Do not separate rs and **l**i one drawer at a time. near the Too box Chest from Trolley. Drawer Load Limit mounting in Vehicles before moving the Toolbox. **Parts List** 0



Measurements: Weight: 42kg (External - With Castors - 125 x 50mm (5 x 2") x2 Locking)								
WIDTH	675 mm	DEPTH	466 mm	HEIGHT	801 mm			
Measurements - Top Section								
WIDTH	665 mm	DEPTH	466 mm	HEIGHT	15 mm			
Shallow Drawers								
WIDTH	566 mm	DEPTH	405 mm	HEIGHT	62 mm			
Deep Drawers								
WIDTH	566 mm	DEPTH	405 mm	HEIGHT	143 mm			

Included 4 x Hex 5mm 13mm x 16 Bolts Non-Locking Locking 6 x Liners Keys x 2 Trolley Handle x 1 Bolts for (16) for Castors Castors (2) Castors (2) **Trolley Handle** (with Washers) **Tools & Assistance** For Castors: For Handle: 2 People **Required for Trolley:** 13mm Spanner 5mm Hex Key

KINCROMEC EVOLUTION TOOI Trolley 5 Drawer 675mm (26") K7925

Assembly Instructions

1 Handle Installing

- Position the trolley side handle behind the holes on the trolley.
- Attach with (4) bolts, and tighten with a 5mm Hex Key.

2 Castor Installing (If applicable)

- Be sure the drawers are locked and lay the trolley on its side.
- Secure castors to the unit using the 13mm bolts provided.
- Tighten with a 13mm Spanner.
- Repeat this process for the castors on the opposite of the trolley.

• Return the trolley to its upright position. **Caution:** Do not over tighten the bolts. **Caution:** Both locking castors must be fitted to front of trolley.


Maintenance


1 Removing the Drawers

- Fully extend the empty drawer.
- Push up the right grey release lever while pushing down the left grey release lever.
- Pull the drawer outward until it is released from the drawer slide.

2 Re-Inserting The Drawers

- Extend the drawer slides.
- Insert the brackets on each side of the drawer into the slots on the slides, being careful that they are properly positioned.
- Once properly inserted, completely close the drawer to set the slides in their proper positions.
- Periodically tighten all hardware
- Periodically lubricate castors
- Lubricate the slides twice a year
- Lubricate the lock with graphite annually
- Use a damp Microfibre cloth to clean all surfaces

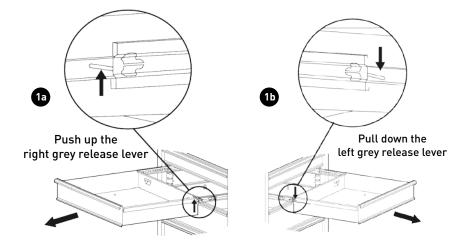

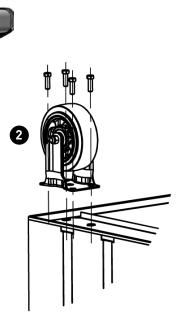

KINGROMEC EVOLUTION TOOL TROLEY 5 Drawer 575mm (26") K7925

Parts List



Spare Parts

ITEM	PART NO.	DESCRIPTION	QUANTITY	ITEM	PART NO.	DESCRIPTION	QUANTITY
1	K7999-10	Lock & Key	1	5	K7999-25	Eva Mat Pack 6 Pce	1
2	K7999-11	Key Only (Specify Number)	1	6	K7999-13	Castor Swivel x 1	2
3	K7999-12	Trolley Handle	1	7	K7999-14	Castor Swivel x 1 (Brake)	2
4	K7999-8	Ball Bearing Slide (Pair)	5	8	K7999-15	Castor Bolt Pack	1

National Head Office National Distribution and Showroom 3 Lakeview Dve, Caribbean Business Park Scoresby Victoria 3179 Australia ABN 41 007 185 006 Administration T (03) 9730 7100 F (03) 9730 7199 E enquiries@kincrome.com.au W kincrome.com.au Customer Service Centre T 1300 657 528 F 1300 556 005 Made to Kincrome Tools & Equipment Pty Ltd Global specifications and quality standards in China Kincrome UK Ltd PO Box 468 Southamoton SO30 9EP

Australia & Global	UK & EU		
www.kincrome.com.au	www.kincrome.co.uk		
enquiries@kincrome.com.au	enquiries@kincrone.co.uk		