

TOOL TROLLEY 7 DRAWER K7787

Operation Manual

Caution: Take Safety Precautions When Using Your Toolbox





THIS OPERATING MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. READ CAREFULLY AND UNDERSTAND ALL INFORMATION BEFORE OPERATING STORAGE CABINET. SAVE THIS MANUAL FOR FUTURE USE



















Parts List









Trolley Handle x 1



16 x 12mm Bolts for Castors

TOOL TROLLEY SPECIFICATIONS

	Width	Depth	Height	
Overall	690mm	460mm	1010mm	
Overall (w/out Castors)				
	690mm	460mm	850mm	
Top Section	675mm	455mm	15mm	
Drawers				
Shallow	565mm	390mm	55mm	
Deep	565mm	390mm	130mm	
Castor Size	125x50m	nm (5"x2")	2x Locking	
Total Weight	45.5kg			


Non-Locking **Swivel Castors (2)**



Locking Swivel Castors (2)



4 x 10mm Bolts for Handle



8 x Liners

TOOLS & ASSISTANCE NEEDED



2 People Lift



or 5mm Hex Key

Handle 10mm Spanner



TOOL TROLLEY 7 DRAWER K7787

Assembly Instructions

1 Handle Installing

- Position the trolley side handle behind the holes on the trolley.
- Attach with (4) bolts and washers and tighten with an adjustable wrench.

Note: The side handle can be mounted to either side of the trolley.

2 Castor Installing (If applicable)

- Be sure the drawers are locked and lay the trolley on its side.
- Secure castors to the unit using the 12mm bolts provided.
- Tighten with a 12mm spanner or 5mm hex key.
- Repeat this process for the castors on the opposite of the trolley.
- Return the trolley to its upright position.

Caution: Do not over tighten the bolts.

Caution: Both locking castors must be fitted to front of trolley.

Removing the Drawers


- Fully extend the empty drawer.
- Push up the right grey release lever while pushing down the left grey release lever.
- Pull the drawer outward until it is released from the drawer slide.

4 Re-Inserting The Drawers

- Extend the drawer slides.
- Insert the brackets on each side of the drawer into the slots on the slides, being careful that they are properly positioned.
- Once properly inserted, completely close the drawer to set the slides in their proper positions.

MAINTENANCE

- Periodically tighten all hardware
- Periodically lubricate castors
- Lubricate the slides twice a year
- Lubricate the lock with graphite annually
- Use a damp Microfibre cloth to clean all surfaces

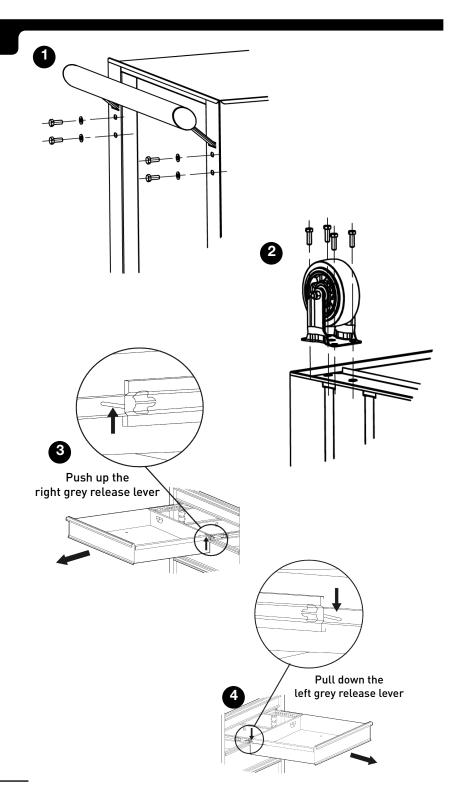

2



TOOL TROLLEY 7 DRAWER K7787

Replacement Parts



ITEM	PART NO.	DESCRIPTION	QUANTITY
1	K7888	Key Only (Specify Number) x 1	1
2	K7787-1	Lock & Key	1
3	K7787-3	Trolley Handle	1
4	K7787-4	Ball Bearing Slide (Pair)	7
5	K7787-5	Drawer Grip (Large)	7
6	K7787-6	EVA Mat Pack 8 Piece	1

ITEM	PART NO.	DESCRIPTION	QUANTITY
7	K7787-7	Large Drawer (Shallow)	5
8	K7787-8	Large Drawer (Deep)	2
9	K7787-12	Castor Swivel x 1	2
10	K7787-10	Castor Swivel x 1 (Brake)	2
11	K7787-11	Castor Bolt Pack	1



National Head Office National Distribution and Showroom 3 Lakeview Dve, Caribbean Business Park Scoresby Victoria 3179 Australia ABN 41 007 185 006 Administration T +61 3 9730 7100 F + 61 3 9730 7199

E enquiries@kincrome.com.au W kincrome.com.au

Customer Service Centre T 1300 657 528 F 1300 556 005 Made to Kincrome Tools & Equipment Pty Ltd Global specifications and quality standards in China Kincrome UK Ltd PO Box 646 EASTLEIGH SO50 0NA

Australia & Global	UK & EU
www.kincrome.com.au	www.kincrome.co.uk
iriaa@kinarama aam a	