

METAL THROATLESS SHEAR CUTTER 100MM





KP15101 ED1 JAN 2018



NOTICE! If you are new to Metal Shearing, we <u>STRONGLY</u> <u>RECOMMEND</u> that you seek training prior to using this shear. Kincrome will not be liable for accidents caused by lack of knowledge or training.




METAL THROATLESS SHEAR CUTTER

Table of Contents

Know Your Product	.1
Safety Instructions	.2
Assembly Instructions	
Operation Instructions	
Blade Replacement & Maintenance	
Spare Parts, Warranty & Troubleshooting	

Know your product

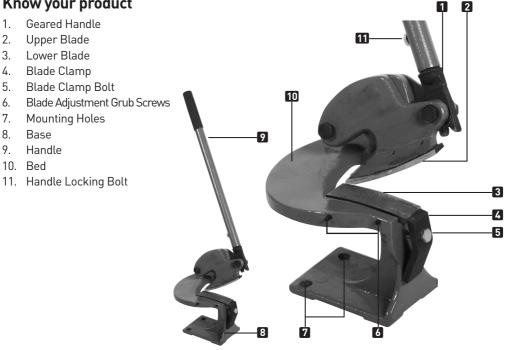

Model No:	KP15101
Cutting Material Types:	Aluminium, Mild Steel, Stainless Steel
Cutting Capacity:	
Mild Steel:	1.5mm
Aluminium:	2.5mm
Stainless Steel:	1.2mm
Max Single Shear Width:	70mm
Blade Length:	100mm
Blade Material:	Hardened Alloy Steel
Handle Length:	460mm
Product Height:	69.5cm
Product Length:	21.5cm
Weight:	7kg

1



GENERAL SAFETY WARNINGS



Save all warnings and instructions for future reference.

WARNING! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in serious injury.

WARNING: The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

1) WORK AREA

- a) Keep work area clean and well lit. Cluttered and/or dark areas invite accidents.
- b) Keep children and bystanders away while operating a Shear. Distractions can cause you to lose concentration.
- c) This Shear is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the Shear by a person responsible for their safety.
- d) Children should be supervised to ensure that they do not play with the Shear. This Shear is not a toy.

2) PERSONAL SAFETY

WARNING! Always wear Australian compliant personal protective equipment.

- a) Stay alert, watch what you are doing and use common sense when operating a Shear. Do not use a Shear while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating shears may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection. Protective equipment such as gloves, dust mask, non-skid safety shoes with steel caps, hard hat, full face shield, and/or hearing protection used for appropriate conditions will reduce personal injuries, as the work can create metal splinters and chips.
- d) Do not overreach. Keep proper footing and balance at all times. This enables better control of the Shear at all times.
- c) Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

3) ADDITIONAL SAFETY WARNINGS FOR SHEARS

- **WARNING!** DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to the tool safety rules. If you use this Shear unsafely or incorrectly, serious personal injury may occur.
- a) Do not force the Shear. Use the correct Shear for the application. The correct Shear will do the job better and safer at the rate for which the Shear is designed.
- b) Do not modify or alter this Shear or use it for an unintended purpose.
- c) Do not increase the length of the handle temporarily or permanently.
- d) Only use this Shear when fixed on a surface that is stable, level, dry and not slippery, and capable of sustaining the load.
- e) Do not use the Shear if any parts are damage broken or misplaced. Repair or replace the parts.
- f) The workpiece may be sharp after shearing, use caution. Be aware of sharp edges or sharp shreds of metal that may be created. Use heavy gloves when handling the workpiece.

4) SERVICE

a) Have your Shear serviced by a qualified repair person using only identical replacement parts.

This will ensure that the correct operation of the Shear is maintained.



METAL THROATLESS SHEAR CUTTER

5) DESCRIPTION OF SYMBOL

The following symbols are shown on the tool:



Wear Safety Gloves



Warning



Wear Ear Protection



Wear Head Protection

Beware of Sharp edges

Wear Safety Boots

UNPACKING

After unpacking, check to make sure that all parts shown in "Know Your Product" have been supplied. If any parts are missing or broken, please contact the place of purchase.

ASSEMBLY

Minor assembly of the Throatless Shear is required.

- This machine must be mounted to a stand or workbench, using the mountings holes
 (7) in the Base (8) with appropriate fasteners before operation (not supplied) (Fig 1).

 The work bench should be anchored to the wall or floor.
- The unpainted surface of the Throatless Shear are coated with a rust preventing waxy oil and should be removed before you begin operating. Use a solvent cleaner that will not damage painted surfaces.
- 3. Slide the Handle (9) over the shaft of the Geared Handle (1) (Fig 2) and tighten locking Bolt (11) using a 14mm spanner (not supplied) (Fig 3).

WARNING: Take caution when working around sharp blade edges

ADJUSTMENTS OF SHEAR BLADES

Note: The Shear has been setup in the factory and should not require any initial adjustments. The clearance should be adjusted to between 1/4 and 1/10 of the thickness of the workpiece.

To adjust the clearance between the Upper Blade (2) and Lower Blade (3).


- 1. Loosen the Blade Clamp Bolt (5) securing the Blade Clamp (4) (Fig 4A).
- 2. To decrease the clearance, turn the Blade Adjusting Grub Screws (6) clockwise (Fig 4B).
- 3. To increase clearance, turn the Blade Adjusting Grub Screws (6) counterclockwise (Fig 4B).
- 4. Push the lower blade back against the two grub screws and check clearance.
- 5. Re-tighen the Blade Clamp Bolt (5), test the cutting action. Repeat above steps if required.




Read the instruction manual before use

Wear Eye Protection


Fig 1

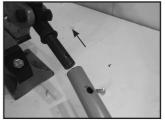



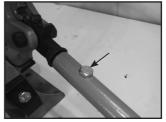



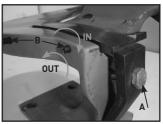





METAL THROATLESS SHEAR CUTTER

OPERATION

- For greater control of the workpiece, start all cuts at the back of the blades. Circular and irregular cuts are made by turning the workpiece while following through with the downward stroke of the blade (Fig 5).
- When a cut has been completed, raise the Handle (9) to lift the blade and push the workpiece forward. Start the next cut at the back of the blade.
- 3. Always keep the material being cut flat on the Bed (10) of the shear (Fig 6).

Replace the Blades

Caution: To reduce risk of injury, it is recommended that the Handle (1) is removed before changing the blades.

Moving/Upper Blade (2) Removal

- 1. Open jaws completely. Be sure to use caution when replacing the blade; if the Handle (9) is bumped the blades may move, causing personal injury.
- Using a Phillips head screw driver (not supplied) remove all three counter sunk screws in the Upper Blade (2) (Fig 7).
- Remove the Upper Blade (2), and re-secure a new Upper Blade (2) with the counter sunk screws.

Lower/Table Blade (3) Removal

- 4. Using a 14mm spanner (not supplied) loosen the Blade Clamping (5) Bolt. Remove and replace the Lower Blade (3). Align the new Lower Blade (3) against both adjusting grub screws and replace the Blade Clamp (4) and Blade Clamping Bolt (5) (Fig 8).
- 5. Alter the Blade Adjustment Grub Screws (6) to adjust the Lower Blade (3) to required clearance for the workpiece (Fig 8B).
- After the Lower Blade (3) is properly adjusted, fully tighten Blade Clamping Bolt (5) Lock Bolt, to secure it in place (Fig 8A). Re-check clearance and perform test cuts.

CLEANING AND MAINTENANCE

- 1. Periodically use Graphite Oil to lubricate blade edges and gears on the Geared Handle (1).
- Keep all areas of the tool clean, particularly those surfaces that contact sheetmetal workpieces. Dirt and metal chips can mark the workpiece.
- 3. Use a mild solvent cleaner that will not damage painted surfaces. Wipe the unpainted parts of the Shear with a light coat of camelia oil to prevent rust.
- 4. Store in a clean & dry environment when not in use.



Fig 5



Fig 6



Fig 7

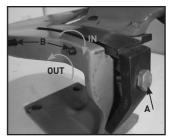


Fig 8



7) TROUBLESHOOTING

PROBLEM	CAUSES	SOLUTIONS
Shear will not cut	Blunt blades	Sharpen or replace shearing blades
	Incorrect blade adjustment	Adjust lower shearing blade
	Material too thick/hard	Cease use of shear and use larger shear
Scratches on material	Debris on shear bed	Clean shear bed
	Material thickness exceeds shear specifications	Cease operating shear and use a larger shear or other method of cutting
Shear hard to operate	Shear assembly bolts too tight, or requires lubrication of components	Check and adjust assembly bolts or lubricate shear components
	Material too hard	Cease operating shear and use a larger shear or other method of cutting

IMPORTANT!

If the throatless metal shear still fails to operate correctly after you have carried out the trouble shooting operations, or in the event of anomalies other than those described above, contact Kincrome Customer Service on 1300 657 528 for assistance.

Spare Parts

A full list of available spare parts for this item visit the Kincrome website kincrome.com.au or alternatively contact Kincrome Customer Service.

Australian Office Contact Details



Phone: 1300 657 528



Fax: 1300 556 005



5

Website: www.kincrome.com.au

UK Office Contact Details



Mail: Kincrome UK Ltd PO Box 646 Eastleigh S050 ONA



Email: enquiries@kincrome.co.uk



Website: www.kincrome.co.uk


KINCROME C.

METAL THROATLESS SHEAR CUTTER

PARTS LIST

No.	Description	Qty
1	Body	1
2	Pivot Arm	1
3	Blade Carrier	1
4	Geared Handle	1
5	Handle Bolt M8 X 20	1
6	Handle	1
7	Handle Grip	1
8	Lower Blade	1
9	Blade Clamp Bolt M8 x 20	1

No.	Description	Qty
10	Blade Clamp	1
11	Pivot Nut M12	1
12	Upper Blade Screws M5 x 8	3
13	Upper Blade	1
14	Adjusting Screw M5 X 35	1
15	Adjusting Screw M5 X 20	1
16	Spring Washer	1

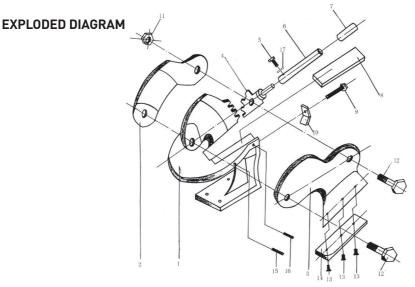



Warranty given by Kincrome Australia Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria (Tel 1300 657 528). The applicable warranty period (12 months) commences on the date that the product is purchased. If this product has materials or workmanship defects (other than defects caused by abnormal or non warranted use) you can, at your cost, send the product to place of purchase, an authorised Kincrome service agent or one of Kincromes addresses for repair or replacement. Your rights under this warranty are in addition to any other rights you have under the Australian Consumer Law or other applicable laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a

replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For further details please visit www.kincrome.com.au or call us. Due to minor changes in design or manufacture, the product you purchase may sometimes differ from the one shown on the packaging.

KP15101 Manual .indd 6



www.kincrome.com.au