

KINCROME

500MM HEAVY DUTY 3 IN 1 MULTI- PURPOSE FAN



KP1015


ED2 (May 22)

Table of Contents

Know Your Product	2
Fan Safety Instructions	3
Fan Assembly	4
Fan Operation	5-6
Maintenance & Spare Parts	6-7
Warranty	7

Know Your Product

1. Locking & Tilt Nut- Left
2. Front Safety Grill
3. Fan Drum Body
4. Rear Safety Grill (On Rear of Fan)
5. 3 Speed Switch (On Rear of Fan)
6. Rotation Locking Nut- Top
7. Locking & Tilt Nut- Right
8. Fan Base
9. Anti-Vibration Feet
10. Rotation Locking Nut- Bottom
11. Fan Blades
12. Mounting Brackets X 3
13. Safety Steel Rope

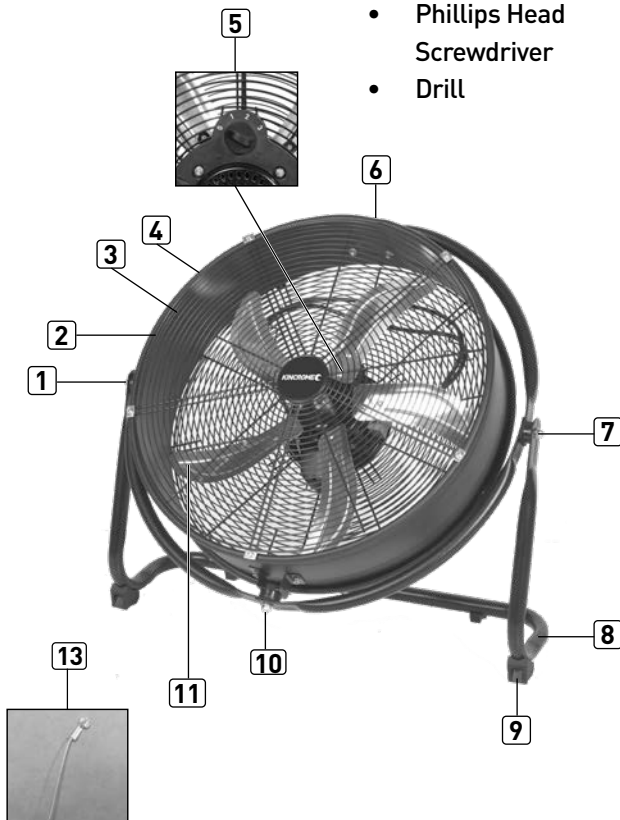

Tools Required

(Not Supplied)

- 13mm Spanner
- Level
- Blade Screwdriver
- Phillips Head Screwdriver
- Drill

Specifications

Power	111W
Max. Motor Speed	1350/min
Diameter	500mm (20")
Speed Selection	3
Air Velocity	110m ³ /min
Blades	5 X Aluminium
Head action	Tiltable & 360° Rotatable
Climate Class	T
Approvals	AS/NZS Compliant
Weight	8.5kg

General Power Tools Safety Warnings



Save all warnings and instructions for future reference.

WARNING! Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

1) Electrical Safety

- a) **Power lead plugs must match the outlet.** Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.**
There is an increased risk of electric shock if your body is earthed or grounded.
- c) **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d) **Do not abuse the cord.** Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.**
Use of an RCD reduces the risk of electric shock.
- f) **Do not operate powered products in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** Powered products create sparks which may ignite the dust or fumes.
- g) **Keep children and bystanders away while operating any powered products.** Distractions can cause you to lose control.

2) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

3) Fan Additional Safety Instructions

- a) **This Fan is not intended for use by persons (including children) with physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the Fan by a person responsible for their safety.**
- b) **Children should be supervised to ensure that they do not play with the Fan.**
- c) **Carefully read all instructions before operating the fan for the first time and save for future reference.**
- d) **Do not use this Fan for anything other than its intended use. Do not use outdoors.** Misuse may cause injury.
- e) **The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical Fans.** It is advisable that a safety switch with a rated residual operating current not exceeding 30mA.
- f) **To protect against electric shock, do not immerse the fan, cord or plug in water or any other liquid.**
- g) **Disconnect the power plug before dismantling, assembling or before cleaning and when the fan is not in use.**
- h) **Avoid touching the moving parts of the fan.**
- i) **Ensure the fan is on a dry and even surface.**
- j) **Never insert fingers, pencils or any other objects through the guards.**
- k) **The fan must have all guards assembled/fastened correctly, according to these instructions before use.**
- l) **Do not operate in the presence of explosives and/or flammable fumes or liquids.**
- m) **Never leave the fan running unattended.**
- n) **Never carry the fan by the cord or pull the cord to disconnect from an outlet; instead, grasp the plug and pull to disconnect.**
- o) **It is recommended to regularly inspect the Fan.** To avoid a hazard do not use the fan if power cord, power plug or Fan becomes damaged in any way. Return the fan to the nearest authorised Service Centre for examination and/or repair.

4) Risk of Electric Shock

- a) **Never touch the mains plug and the socket with wet hands.**
- b) **Do not pull the plug from the socket by pulling on the power cable.**
- c) **Check the power cord and mains plug for damage before every use.**
- d) **To avoid accidents due to electrical faults we recommend the use of sockets with a line-side current-limiting circuit breaker (max. 30 mA nominal tripping current).**
- e) **Check the appliance and the power cord regularly for any possible damage.** Don't use damaged appliances.
- f) **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**

5) General Safety Warnings

Caution:

- a) Before drilling into wall structures, ensure that there are no concealed power cables, plumbing pipes or electrical wires in the cavity.
Ensure the structure you are fastening the wall fan onto is sound in construction and is capable of withstanding the weight of the fan.
- b) Obtain professional advise if you are unsure that your structure can withstand the weight of the wall fan (The cost for such professional advise is not covered by Kincrome).
- c) Ensure that you use adequate structural fasteners to install the wall fan to your structure. Obtain fastener type advise from your local hardware store or fastening specialist.

6) Labels on Product

The following symbols are shown on the tool:



The 3 in 1 Multi-Purpose Fan is intended for indoor use only.



Read the instruction manual before use.



Warning



Regulatory Compliance Mark

7) Unpacking

Unpack all the components from the box.

When unpacking the KP1015 3 in 1 Multi-Purpose Fan, carefully inspect for any damage that may have occurred during transit. Check for loose parts, missing parts or damaged parts.

1. Ensure all packaging materials are disposed of as per your local council guide lines.

8) Assembly

The KP1015 3 in 1 Multi-Purpose Fan is shipped fully assembled and ready to use straight out of the box.

9) Installation Warning For Fans

Caution: Ensure the installation of the 3 in 1 Multi-Purpose Fan is done so using a qualified carpenter/handyman or maintenance person.


Note: When mounting the 3 in 1 Multi-Purpose Fan onto the wall, it is recommended to do so with the assistance of another person. Tools needed for mounting and adjustments are not supplied.

1. Ensure there is suitable internal wall/ceiling supports within the area where the fan is to be installed.
2. Obtain advise from your local hardware or fastener specialist for the correct fasteners to suit your installation application.
3. Follow the advise given by your local hardware or fastening specialist regarding the correct use of the fasteners when installing the fan.


10) Mounting the 3 in 1 Multi-Purpose Fan to a Wall or Ceiling

Caution: Ensure the installation of the 3 in 1 Multi-Purpose Fan is done so using a qualified carpenter/handyman or maintenance person. Instructions indicated below are provided as a guide regarding the correct installation sequence & not the fixing of the fan to your structure.

1. When installing the 3 in 1 Multi-Purpose Fan onto a wall or ceiling ensure the 3 mounting brackets (12) are located as instructed in (Fig.1a).
 2. Ensure the side mounting brackets (12) are parallel, and then install the 3rd remaining mounting bracket (12) (Fig.1b).
- Note:** Ensure the two side mounting brackets (12) holes are level prior to drilling.
3. Assemble the mounting brackets (12) to the wall or ceiling (Fig.1c), using the tools which are appropriate for the fasteners/anchors as per your fastener manufactures instructions.
 4. Once the mounting brackets (12) have been fitted to the wall (Fig.1b), feed the fan base (8) through the mounting brackets (12) (Fig.1d).
 5. To lock the mounting brackets (12) to the fan base (8), use a phillips head screw driver to tighten the screws in the mounting bracket (12) (Fig.1e).
 6. Finally fasten the safety steel rope (13), which is attached to the fan base (8) to the wall/ceiling ensuring it is fastened to a secure location, using the appropriate fasteners (not supplied) (Fig.1f).

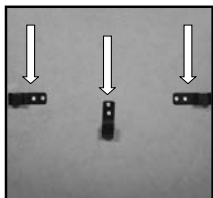


(Fig.1a)

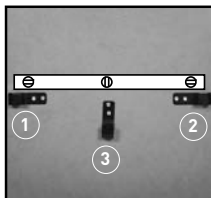

(Fig.1b)




(Fig.1c)

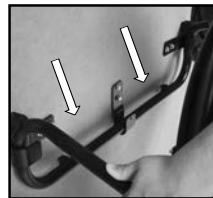

(Fig.1d)



(Fig.1e)

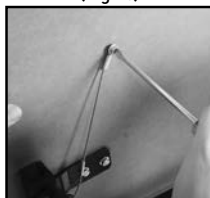

(Fig.1f)

11) Operation

Caution: Prior to plugging in the unit ensure the 3 speed switch (5) is in the OFF (0) position.

1. Located at the rear of the motor unit is the 3 speed switch (5) (Fig.2).
2. Plug the fan into a wall socket and switch the socket ON.
3. Rotate the 3 speed switch (5) to the desired speed 0 – OFF, 1 – LOW, 2 – MEDIUM, 3 – HIGH.
4. To turn the unit OFF rotate the 3 speed switch (5) to the OFF position (0).




(Fig.2)

12) Fan Body Tilt Adjustment

Caution: Ensure the unit is turned OFF and unplugged, and the blades are stationary prior to making any adjustments.


1. To adjust the fan tilt; loosen both locking/tilt nuts (1 & 7) with a 13mm spanner in an anti-clockwise direction (Fig.3a).
2. Tilt the fan to the desired position (Fig.3b);
3. Re-tighten the fastening/locking nuts (1 & 7) with a 13mm spanner in a clockwise direction (Fig.3c);
4. Plug the unit back in and turn ON to the desired speed.

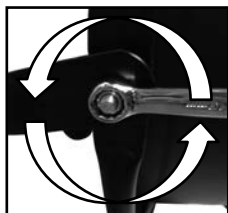

(Fig.3a)



(Fig.3b)

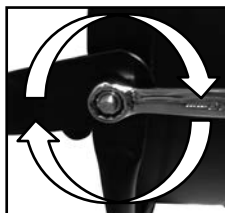


(Fig.3c)


13) 360° Fan Body Rotation Adjustment

Caution: Ensure the unit is turned OFF and unplugged, and the blades are stationary prior to making any adjustments.


1. To adjust the fans 360° body rotation ; loosen both the rotation locking nuts (6 & 10) located on the top and the bottom of the fan drum body (3), with a 13mm spanner by rotating anti-clockwise (Fig.4a).
2. Rotate the fan to the desired position (Fig.4b).
3. Re-tighten the fan rotation locking nuts (6 & 10) with the 13mm spanner by rotating clockwise until the fan is locked into your desired rotation position (fig 4c).

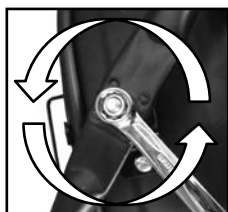

(Fig.4a)

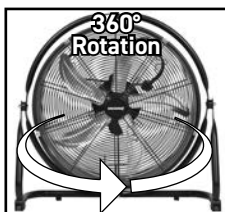

(Fig.4b)

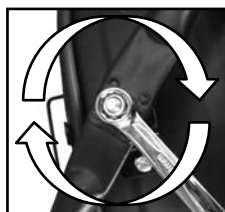

(Fig.4c)


14) Care & Maintenance

Caution: Prior to making any adjustments ensure the unit is turned off and unplugged, and the blades are stationary.

Note: Fig 5a and 5b are on page 7 of this instruction manual.

1. Disconnect the unit from the wall socket prior to cleaning the unit.
2. Remove the front and rear safety grills (2 & 4) by removing the 12 securing bolts (6 each side) located on the outer edges of the front and rear heavy duty safety grills (2 & 4) (Fig.5a).
3. Clean the fan only with a slightly damp, soapy cloth, but ensure it is not too wet. After wiping down the unit with the soapy cloth, dry any wet spots with a dry paper towel or dry clean cloth.
4. Do Not spray or rinse with any form of liquid and/or detergents.
5. Leave the fan to dry, and remount the front and rear safety grills (2 & 4) back onto the fan, by securing the bolts removed in step 2.
6. Store the fan in a clean dry area when not in use.
7. To prevent excess build up of dust and debris on the fan blade and grills purchase the optional accessory KP1001 500mm fan cover from your retailer (Fig.5b).
The fan cover will prevent dust build up leading to less cleaning of the fan blades and fan grills being required.

14) Care & Maintenance (Continued)

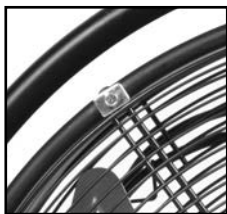

(Fig.5a)



(Fig.5b)

15) Spare Parts

For a full list of available spare parts for this item visit the Kincrome website kincrome.com.au or alternatively contact Kincrome Customer Service.

16) Office Contact Details:



Phone: 1300 657 528



Fax: 1300 556 005



Email: enquiries@kincrome.com.au



Website: www.kincrome.com.au

17) Caring for the Environment



When a tool is no longer usable it should not be disposed of with household waste, but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice.



Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

Notes:

18) Warranty

**1 YEAR
WARRANTY**

Warranty given by Kincrome Australia Pty Ltd of 3 Lakeview Drive, Caribbean Park, Scoresby, Victoria (Tel 1300 657 528). The applicable warranty period (12 months) commences on the date that the product is purchased. If this product has materials or workmanship defects (other than defects caused by abnormal or non warranted use) you can, at your cost, send the product to place of purchase, an authorised Kincrome service agent or one of Kincromes addresses for repair or replacement. Your rights under this warranty are in addition to any other rights you have under the Australian Consumer Law or other applicable laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For further details please visit www.kincrome.com.au or call us. Due to minor changes in design or manufacture, the product you purchase may sometimes differ from the one shown on the packaging.

KINCROME

www.kincrome.com.au